

Panasonic

Operating Instructions

Compact Laser Fax


Model No. **KX-FL313HK**



Please read these operating instructions before using the unit and save for future reference.

This unit is compatible with Caller ID. To use this feature, you must subscribe to the appropriate service of your service provider.

How to use the operating instructions

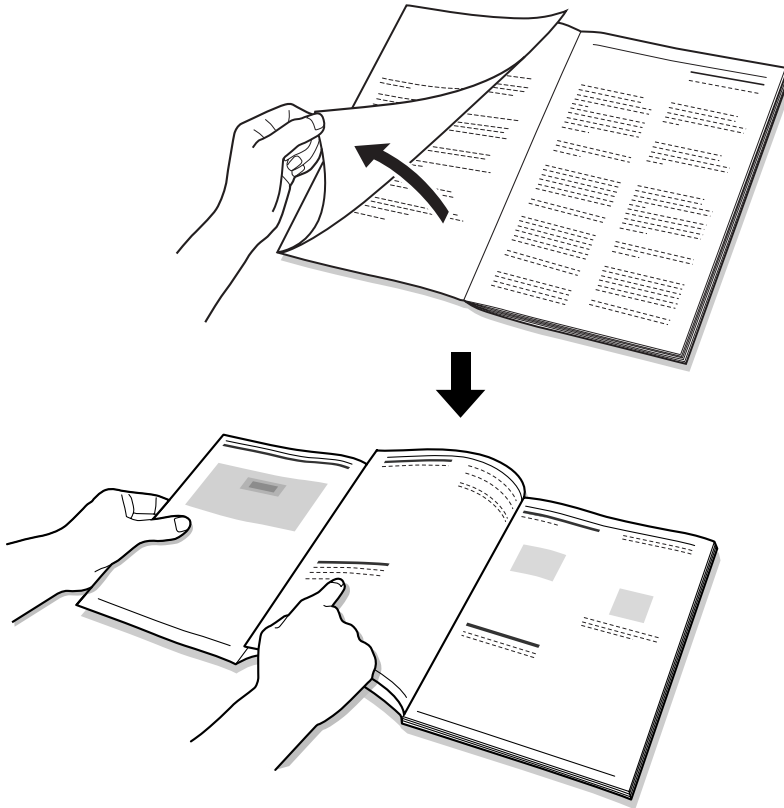


When following operating instructions, always keep the front cover page (next page) open for easy reference to the buttons.



Location of controls

Please keep this page open when following operating instructions.
For a description of each button, see page 8.

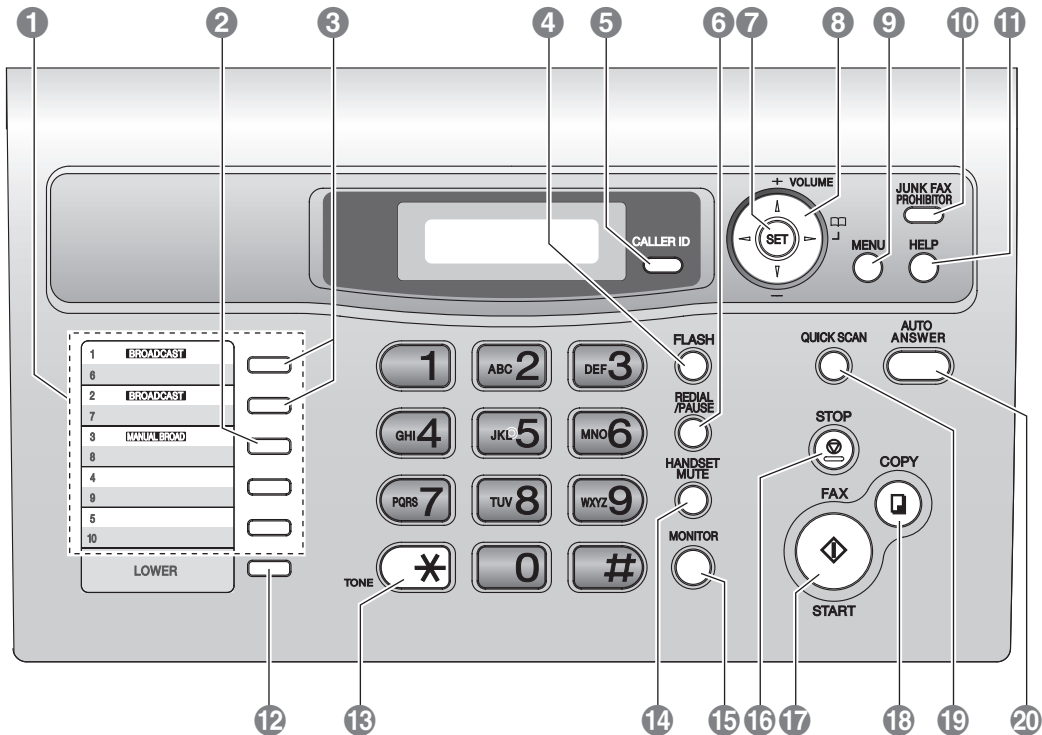

Buttons (Listed in alphabetical order)

AUTO ANSWER 20
BROADCAST 3
CALLER ID 5
COPY 18
FAX 17
FLASH 4
HANDSET MUTE 14
HELP 11

JUNK FAX PROHIBITOR 10
LOWER 12
MANUAL BROAD 2
MENU 9
MONITOR 15
Navigator key 8
QUICK SCAN 19
REDIAL/PAUSE 6

SET 7
Station keys 1
START 17
STOP 16
TONE 13
VOLUME 8

Thank you for purchasing a Panasonic fax machine.

Things you should keep a record of

Attach your sales receipt here.

For your future reference

Date of purchase
Serial number (found on the rear of the unit)
Dealer's name and address
Dealer's telephone number

Caution:

- Do not rub or use an eraser on the printed side of recording paper, as the print may smear.

Copyright:

- This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2006 Panasonic Communications Co., Ltd. All Rights Reserved.

Important safety instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from power outlets before cleaning. Do not use liquid or aerosol cleaners.
4. Do not use this unit near water, for example near a bathtub, wash bowl, kitchen sink, etc.
5. Place the unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. For safety purposes this unit is equipped with a grounded plug. If you do not have this type of outlet, please have one installed. Do not defeat this safety feature by tampering with the plug.
9. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
10. Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
11. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
12. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorised service centre when service is required. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
13. Unplug this unit from power outlets and refer servicing to an authorised service centre when the following conditions occur:
 - A. If the power cord is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorised service centre.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
14. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.

15. Do not use this unit to report a gas leak, when in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

CAUTION:

Installation


- After moving the unit from cold areas to warmer areas, let the unit adjust to the warmer temperature and do not connect the unit for about 30 minutes. If the unit is connected too soon after a sudden climate change, condensation may form inside the unit causing malfunction.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Do not touch the plug with wet hands.

Laser radiation

- The printer of this unit utilises a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Fuser unit

- The fuser unit gets hot. Do not touch it.
- During or immediately after printing, the area near the recording paper exit (①) also gets warm. This is normal.

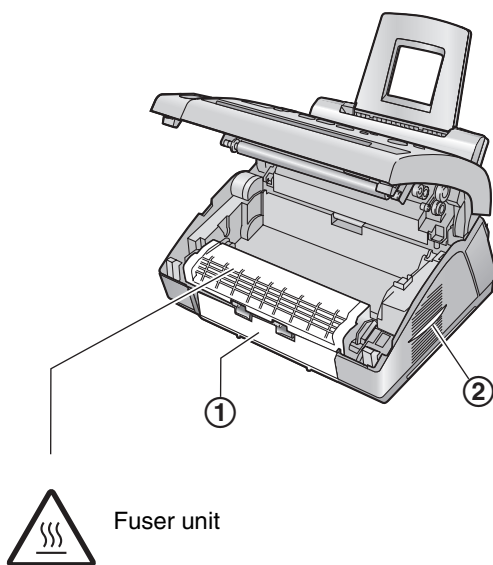

Toner cartridge

- Be careful of the following when you handle the toner cartridge:
 - Do not leave the toner cartridge out of the protection bag for a long time. It will decrease the toner life.
 - If you ingest any toner, drink several glasses of water to dilute your stomach contents, and seek immediate medical treatment.
 - If any toner comes into contact with your eyes, flush them thoroughly with water, and seek medical treatment.
 - If any toner comes into contact with your skin, wash the area thoroughly with soap and water.
 - If you inhale any toner, move to an area with fresh air and consult local medical personnel.

Drum unit

- Read the instructions on page 10 before you begin installation of the drum unit. After you have read them, open the drum unit protection bag. The drum unit contains a photosensitive drum. Exposing it to light may damage the drum. Once you have opened the protection bag:
 - Do not expose the drum unit to light for more than 5 minutes.
 - Do not touch or scratch the black drum surface.

- Do not place the drum unit near dust or dirt, or in a high humidity area.
- Do not expose the drum unit to direct sunlight.

WARNING:

- To prevent the risk of fire or electrical shock, do not expose this product to rain or any type of moisture.
- Unplug this unit from power outlets if it emits smoke, an abnormal smell or makes unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped and contact an authorised service centre.
- Make sure that the unit is installed in a well ventilated room so as not to increase density of ozone in the air. Since ozone is heavier than air, it is recommended that air at floor level be ventilated.

For best performance

Toner cartridge and drum unit

- For optimal performance, genuine Panasonic toner cartridges and drum units are recommended. We cannot be responsible for problems that may be caused by a non-Panasonic toner cartridge or drum unit:
 - Damage to the unit
 - Poor print quality
 - Improper operation
- In the printing process, heat is used to fuse toner onto the page. As a result, it is normal for the machine to produce an odour during and shortly after printing. Be sure to use this unit in an area with proper ventilation.
- To extend the life of the drum unit, the unit should never be turned OFF immediately after printing. Leave the power turned ON for a minimum of 30 minutes after printing.
- Do not cover slots or openings on the unit. Inspect the air circulation vents regularly and remove any dust build-up with a vacuum cleaner (②).
- When replacing the toner cartridge or drum unit, do not allow dust, water, or liquids to come in contact with the drum. This may affect print quality.

Static electricity

- To prevent static electricity damage to the interface connectors or other electrical components inside the unit, touch a grounded metal surface before touching the components.

Environment

- Keep the unit away from electrical noise generating devices, such as fluorescent lamps and motors.
- The unit should be kept free from dust, high temperature and vibration.
- The unit should not be exposed to direct sunlight.
- Do not place heavy objects on top of the unit.
- When you leave the unit unused for a long period of time, unplug this unit from the power outlet.

- The unit should be kept away from heat sources such as heaters, kitchen stoves, etc. It should not be placed in rooms where the temperature is less than 10 °C or greater than 32.5 °C. Damp basements should also be avoided.

Recording paper

- Store unused paper in the original packaging, in a cool and dry place. Not doing so may affect print quality.

Routine care

- Wipe the outer surface of the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder.

1. Introduction and Installation

Accessories

- 1.1 Included accessories 7
- 1.2 Accessory information 8

Finding the Controls

- 1.3 Description of buttons 8
- 1.4 Overview 9

Installation

- 1.5 Toner cartridge and drum unit 10
- 1.6 Paper tray 12
- 1.7 Paper stacker 12
- 1.8 Document stacker 13
- 1.9 Handset cord 13
- 1.10 Recording paper 14

2. Preparation

Connections and Setup

- 2.1 Connections 15
- 2.2 Dialling mode 16

Help Button

- 2.3 Help function 16

Volume

- 2.4 Adjusting volume 17

Initial Programming

- 2.5 Date and time 17
- 2.6 Your logo 18
- 2.7 Your fax number 20

3. Telephone

Automatic Dialling

- 3.1 Phonebook 21
- 3.2 One-touch dial feature 22

Caller ID

- 3.3 Caller ID service 23
- 3.4 Viewing and calling back using caller information 24
- 3.5 Editing a caller's telephone number before calling back 24
- 3.6 Erasing caller information 24
- 3.7 Storing caller information into the phonebook / one-touch dial 25

4. Fax

Sending Faxes

- 4.1 Sending a fax manually 27
- 4.2 Document requirements 28
- 4.3 Sending a fax using one-touch dial feature and phonebook 29
- 4.4 Broadcast transmission 29

Receiving Faxes

- 4.5 Selecting the way to use your fax machine . 31
- 4.6 Receiving a fax automatically – Auto answer ON 33
- 4.7 Receiving a fax manually – Auto answer OFF.

33

- 4.8 Using the unit with an answering machine...35
- 4.9 Receive polling (retrieving a fax placed on another fax machine)35
- 4.10 Junk fax prohibitor (preventing fax reception from undesired callers).....36

5. Duplex Ring

Duplex Ring

- 5.1 Using with the ring detection feature.....37

6. Copy

Copying

- 6.1 Making a copy38

7. Programmable Features

Features Summary

- 7.1 Programming.....40
- 7.2 Basic features41
- 7.3 Advanced features42

8. Help

Error Messages

- 8.1 Error messages – Reports46
- 8.2 Error messages – Display47

Troubleshooting

- 8.3 When a function does not work, check here 49

Replacement

- 8.4 Replacing the toner cartridge and the drum unit 53

Jams

- 8.5 Recording paper jam.....56
- 8.6 Document jams59
- 8.7 No feeding or multiple feeding occurs60

Cleaning

- 8.8 Cleaning the inside of the unit.....60

9. General Information

Printed Reports

- 9.1 Reference lists and reports63

Specifications


- 9.2 Specifications64

10.Index

- 10.1 Index 67

1.1 Included accessories

No.	Item	Quantity	Notes
①	Power cord	1	-----
②	Telephone line cord	1	-----
③	Handset	1	-----
④	Handset cord	1	-----
⑤	Paper tray	1	-----
⑥	Paper stacker	1	-----
⑦	Document stacker	1	-----
⑧	Drum unit	1	See page 66.
⑨	Toner cartridge (starter toner cartridge)	1	prints about 500 A4-sized pages with a 5% image area (page 65).
⑩	Operating instructions	1	Chinese
		1	English
⑪	Quick installation guide	1	-----

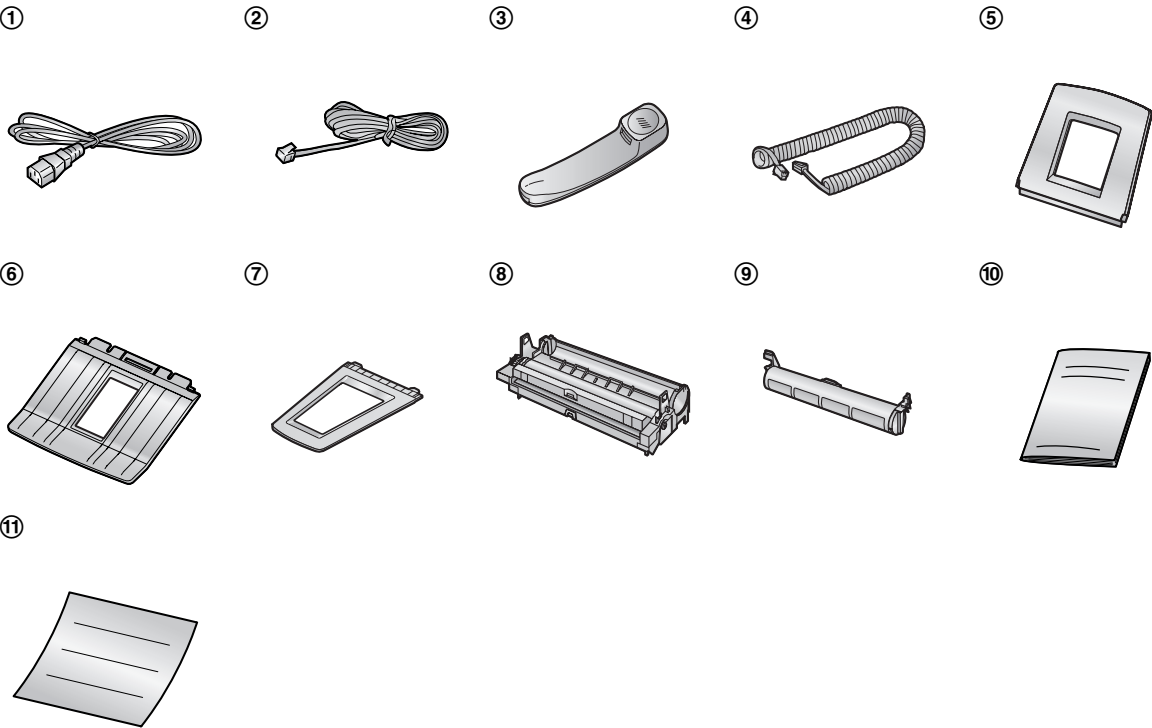

Note:

- If any items are missing or damaged, contact the place of purchase.
- Save the original carton and packing materials for future shipping and transportation of the unit.

1.2 Accessory information

To ensure that the unit operates properly, we recommend the use of Panasonic toner cartridge and drum unit. See page 65 for specifications.


1.2.1 Available accessories

- **Replacement toner cartridge (KX-FAT90E)**
- **Replacement drum unit (KX-FAD91E)**
- We cannot be responsible for any damage to the unit or degradation of print quality which may occur from the use of a non-Panasonic toner cartridge and drum unit.

1.3 Description of buttons

- Keep the front cover page open for button locations.
- 1 Station keys**
 - To use the one-touch dial feature (page 22, 29).
 - 2 [MANUAL BROAD]**
 - To send a document to multiple parties manually (page 29, 30).
 - 3 [BROADCAST]**
 - To send a document to multiple parties (page 29, 30).
 - 4 [FLASH]**
 - To access special telephone services or for transferring extension calls.
 - 5 [CALLER ID]**
 - To view caller information (page 24).
 - To change the display of the caller information (page 24).
 - 6 [REDIAL/PAUSE]**
 - To redial the last number dialled. If the line is busy when you make a phone call using the **[MONITOR]** button, the unit will automatically redial the number up to 9 times.
 - To insert a pause during dialling.
 - 7 [SET]**
 - To store a setting during programming.
 - 8 Navigator key [➕] [➔] [▲] [▼] [◀] [▶] [VOLUME] [□□]**
 - To adjust volume (page 17).
 - To search for a stored item (page 21, 29).
 - To select features or feature settings during programming (page 40).
 - To access the phonebook (page 21).
 - 9 [MENU]**
 - To initiate or exit programming.
 - 10 [JUNK FAX PROHIBITOR]**
 - To use junk fax prohibitor (page 36).
 - 11 [HELP]**
 - To print helpful information for quick reference (page 16).
 - 12 [LOWER]**
 - To select stations 6–10 for the one-touch dial feature (page 22, 29).
 - 13 [TONE]**
 - To change from pulse to tone temporarily during dialling when your line has rotary pulse service.
 - 14 [HANDSET MUTE]**
 - To mute your voice to the other party during a conversation. Press again to resume the conversation.
 - 15 [MONITOR]**
 - To initiate dialling.
When you press **[MONITOR]** during receiving a call, you will be able to hear the other party, but the other party will not be able to hear you.
 - 16 [STOP]**
 - To stop an operation or programming session.
 - To delete a character from names and telephone numbers (page 19).
 - To return to a previous step during operation.
 - 17 [FAX][START]**
 - To start sending or receiving a fax.
 - 18 [COPY]**
 - To copy a document (page 38).
 - 19 [QUICK SCAN]**
 - To store a scanned document into memory, and then send it (page 27).
 - 20 [AUTO ANSWER]**
 - To turn the auto answer setting ON/OFF (page 33).

1.4 Overview

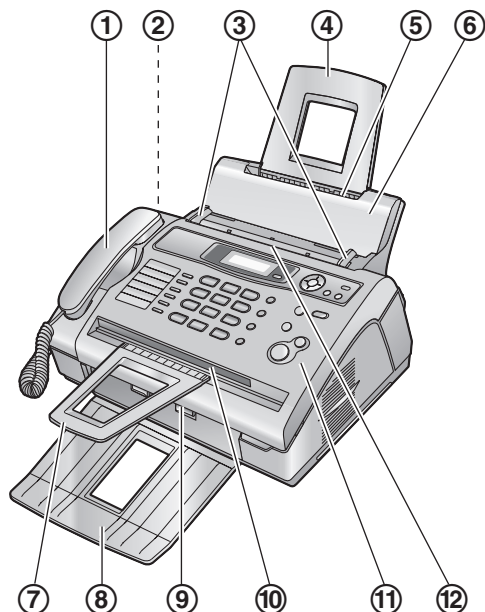


- ① Handset
- ② Speaker
- ③ Document guides
- ④ Paper tray
- ⑤ Recording paper entrance
- ⑥ Tension plate
- ⑦ Document stacker*¹
- ⑧ Paper stacker*¹
- ⑨ Recording paper exit
- ⑩ Document exit
- ⑪ Front cover
- ⑫ Document entrance

*1 The paper stacker and document stacker may not be shown in all illustrations.

Removing the shipping tape

Remove the shipping tape (①) before installation.

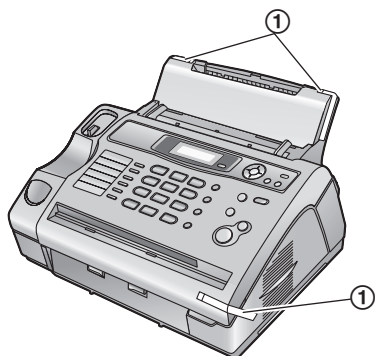


1.5 Toner cartridge and drum unit

The included toner cartridge is a starter toner cartridge. It will print about 500 A4-sized pages with a 5 % image area (page 65).

- To replace the toner cartridge and the drum unit, see page 53.


Caution:

- **Read the following instructions before you begin installation. After you have read them, open the drum unit protection bag. The drum unit contains a photosensitive drum. Exposing it to light may damage the drum. Once you have opened the protection bag:**
 - Do not expose the drum unit to light for more than 5 minutes.
 - Do not touch or scratch the black drum surface.
 - Do not place the drum unit near dust or dirt, or in a high humidity area.
 - Do not expose the drum unit to direct sunlight.
 - **Do not leave the toner cartridge out of the protection bag for a long time. It will decrease the toner life.**
- 1 Before opening the protection bag of the new toner cartridge, shake it vertically more than 5 times.

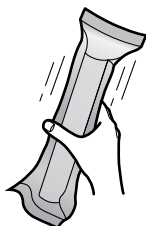


- 2 Remove the toner cartridge and drum unit from the protection bags. Peel off the seal (①) from the toner cartridge.


- Do not touch or scratch the black drum surface (②).

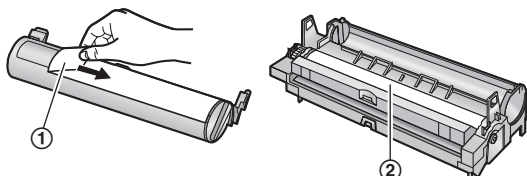


- 3 Place the toner cartridge (①) into the drum unit (②) vertically.

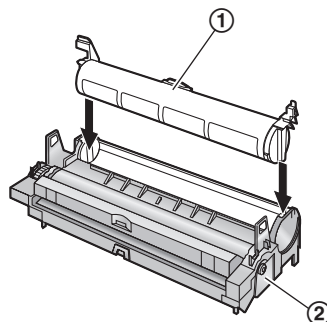


- 4 Turn the lever (①) on each side of the toner cartridge while pressing down firmly.

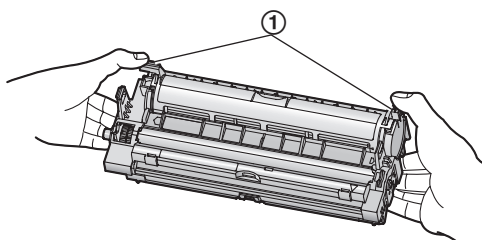


- 5 Make sure that the triangles (①) match, to install the toner cartridge correctly.

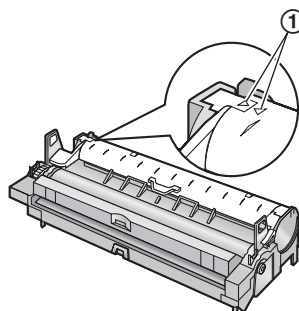


- 6 Lift open the front cover (①), holding the OPEN tab (②).

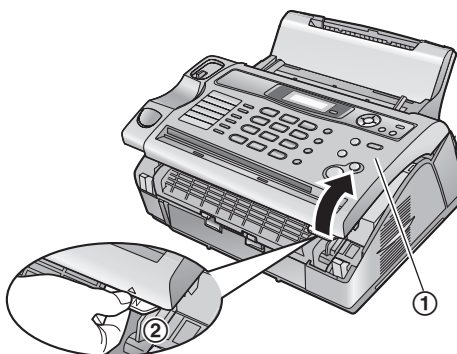


- If the lower glass (③) is dirty, clean it with a soft and dry cloth.

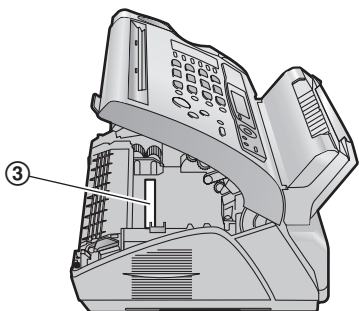

- 7 Install the drum and toner unit (①) by holding the tabs.

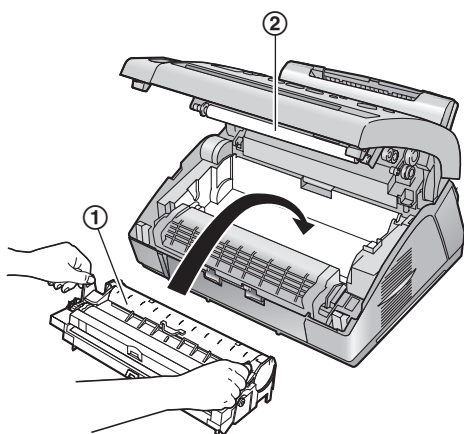

- Do not touch the transfer roller (②).
- Make sure that the triangles (③) match to install the drum and toner unit correctly.

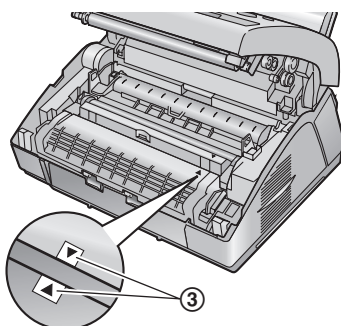

- 8 Close the front cover (①) by pushing down on both sides, until locked.




Toner save feature

If you want to reduce toner consumption, set the toner save setting to ON (feature #79 on page 45). The toner cartridge will last approximately 40 % longer. This feature may lower the print quality.

1.6 Paper tray

Insert the paper tray (①) into the slot (②) on the back of the unit.

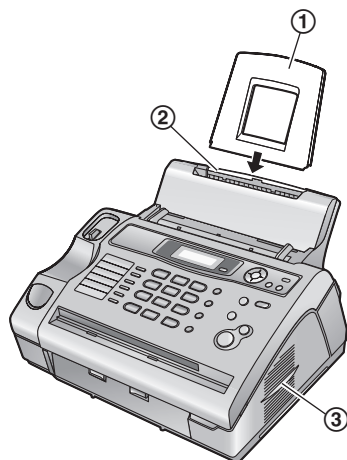


Note:

- Do not place the unit in an area where the paper tray may be obstructed (i.e., by a wall, etc.).
- Keep this surface (③) away from walls etc. more than 50 mm to let the unit cool down.

1.7 Paper stacker

Line up the slots (①) in the paper stacker with the pegs (②) on the bottom of the unit, then insert the two tabs of the paper stacker into the slots on the unit (③).

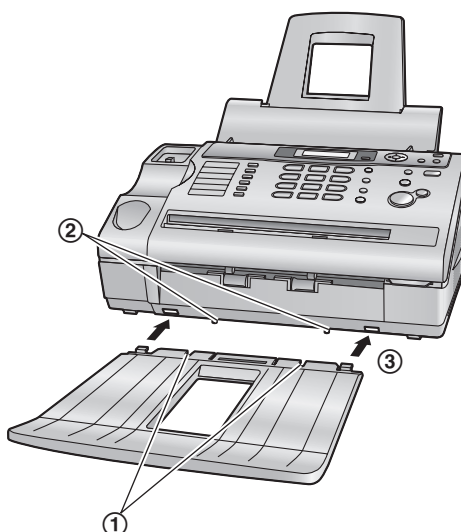


Note:

- Do not place the unit in an area where the paper stacker may be easily bumped into.
- Document and recording paper will be ejected from the front of the unit. Do not place anything in front of the unit.
- The paper stacker can hold up to approximately 30 sheets of printed paper. Remove the printed paper before the paper stacker becomes full.

1.8 Document stacker

Insert the document stacker (①) into the slots (②).

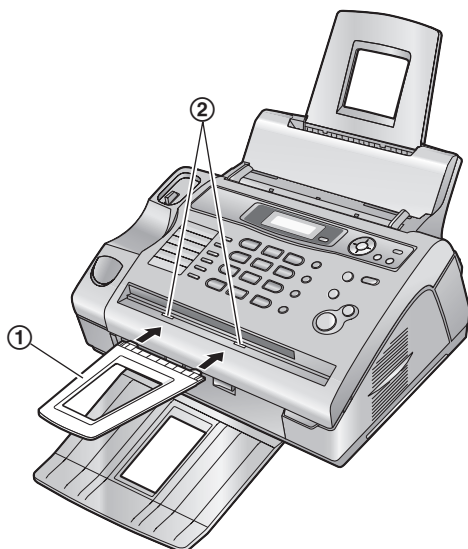


Note:

- Make sure the document stacker is inserted completely, or the document may jam.

1.9 Handset cord

Connect the handset cord (①).

- The jack on the longer, uncoiled end (②) of the handset cord should be connected to the handset.

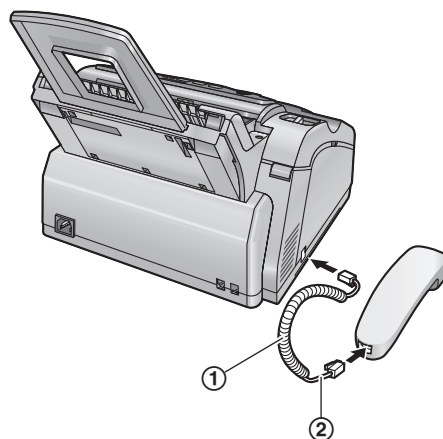

1.10 Recording paper


A4, letter or legal size recording paper can be used.

The unit can hold:


- Up to 200 sheets of 60 g/m² to 75 g/m² paper.
- Up to 180 sheets of 80 g/m² paper.
- Up to 150 sheets of 90 g/m² paper.

Please refer to page 65 for information on recording paper.


- 1 Before inserting a stack of paper, fan the paper to prevent paper jams.

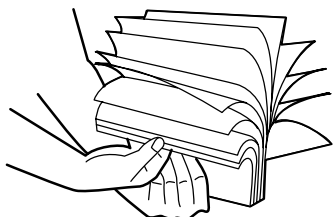

- 2 Pull the tension plate forward (①).

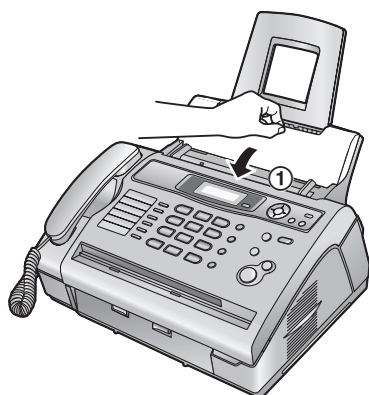

- 3 Insert the paper, print-side down (①).

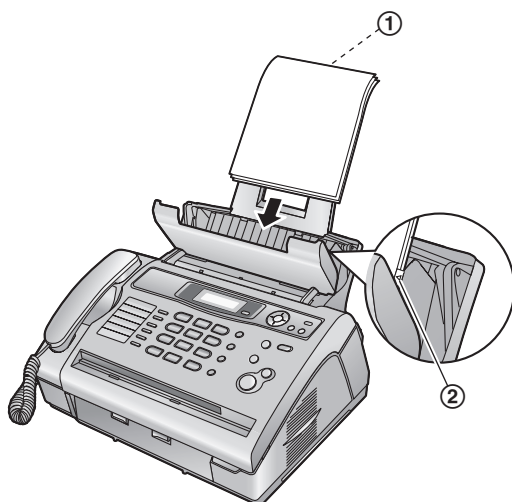

- The paper should not be over the tab (②).
- If the paper is not inserted correctly, re-adjust the paper, or the paper may jam.


Correct



Incorrect



- 4 Push the tension plate back (①).

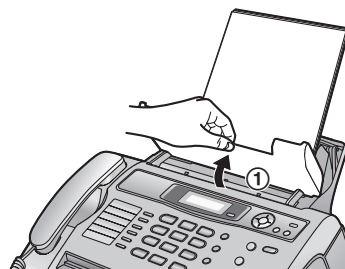


2.1 Connections

Caution:

- When you operate this product, the power outlet should be near the product and easily accessible.
- Be sure to use the telephone line cord included in this unit.
- Do not extend the telephone line cord.


- ① Telephone line cord
 - Connect to a single telephone line jack.
- ② Power cord
 - Connect to the power outlet (220 – 240 V, 50/60 Hz).
- ③ [EXT] jack
 - You can connect an answering machine (page 35) or a telephone. Remove the stopper if attached.
- ④ Answering machine (not included)

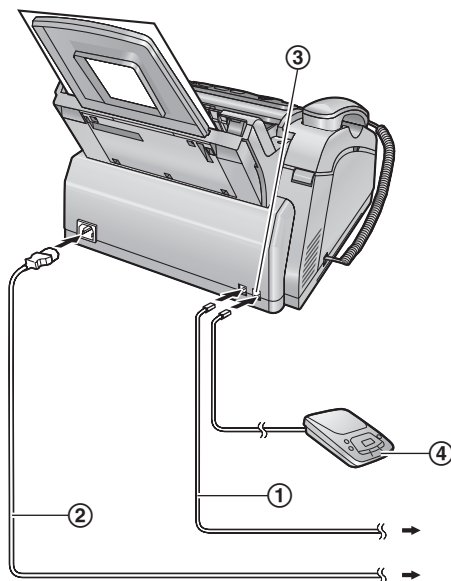

Note:


- To avoid malfunction, do not position the fax machine near appliances such as TVs or speakers which generate an intense magnetic field.
- If any other device is connected to the same telephone line, this unit may disturb the network condition of the device.

- If you use the unit with a computer and your internet provider instructs you to install a filter (⑤), please connect it as follows.

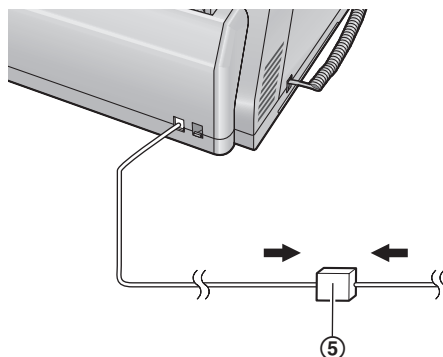

2.2 Dialling mode

If you cannot dial (page 21, 27), change this setting depending on your telephone line service.

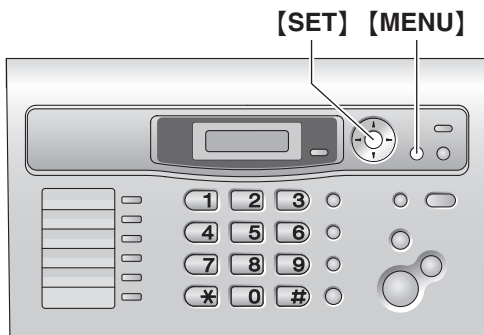

- 1 Press **[MENU]**.

SYSTEM SETUP
PRESS [◀ ▶]

- 2 Press **[◀]**, then **[1][3]**.


DIALLING MODE
=TONE [±]

- 3 Press **[1]** or **[2]** to select the desired setting.
[1] "PULSE": For rotary pulse dial service.
[2] "TONE" (default): For tone dial service.
- 4 Press **[SET]**.
- 5 Press **[MENU]** to exit.

2.3 Help function


The unit contains helpful information which can be printed for quick reference.

- "BASIC SETTINGS":
How to set the date, time, your logo and fax number.
- "FEATURE LIST":
How to program the features.
- "PHONEBOOK":
How to store names and numbers in the phonebook and how to dial them.
- "FAX RECEIVING":
Help with problems to receive faxes.
- "COPIER":
How to use the copier function.
- "REPORTS":
List of available reports.
- "CALLER ID":
How to use the Caller ID features.

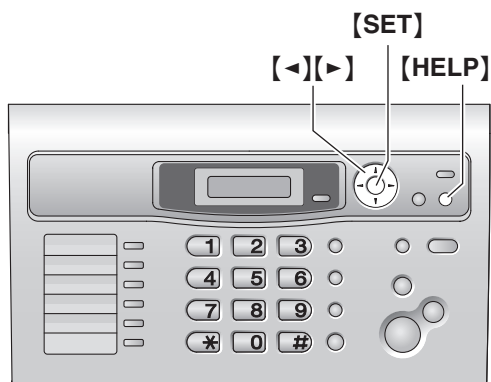

- 1 Press **[HELP]**.
- 2 Press **[◀]** or **[▶]** repeatedly to display the desired item.
- 3 Press **[SET]**.
 - The selected item will be printed.

2.4 Adjusting volume

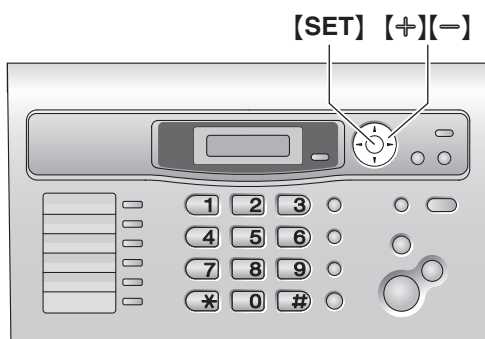

Ringer volume

While the unit is idle, press **[+]** or **[-]**.

- If any documents are in the document entrance, you cannot adjust the volume. Confirm that there are no documents in the entrance.

To turn the ringer OFF

1. Press **[-]** repeatedly to display “**RINGER OFF=OK?**”.
2. Press **[SET]**.
 - When a call is received, the unit will not ring and will display “**INCOMING CALL**”.
 - To turn the ringer back ON, press **[+]**.

Ringer type

- You can select one of three ringer types (feature #17 on page 41).

Handset receiver volume


While using the handset, press **[+]** or **[-]**.

Monitor volume

While using the monitor, press **[+]** or **[-]**.

2.5 Date and time

You must set the date and time.

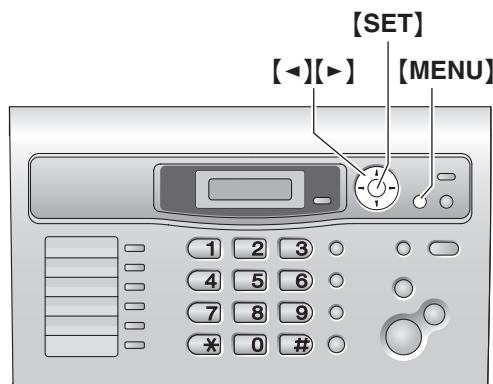

- 1 Press **[MENU]**.

SYSTEM SETUP
PRESS [**<**] [**>**]

- 2 Press **[#]**, then **[0][1]**.

SET DATE & TIME
PRESS SET

- 3 Press **[SET]**.

- The cursor (■) will appear on the display.

D:01/M:01/Y:06
TIME: 00:00

- 4 Enter the current date/month/year by selecting 2 digits for each.

Example: 10 August, 2006

Press **[1][0][0][8][0][6]**.

D:10/M:08/Y:06
TIME: 00:00

- 5 Enter the current hour/minute by selecting 2 digits for each. Press **[*]** repeatedly to select “**AM**” or “**PM**”, or 24-hour time entry.

Example: 3:15PM (12 hour clock entry)

1. Press **[0][3][1][5]**.

D:10/M:08/Y:06
TIME: 03:15

2. Press **[*]** repeatedly to display “**PM**”.

D:10/M:08/Y:06
TIME: 03:15PM

- 6 Press **[SET]**.

SETUP ITEM []

- 7 Press **[MENU]** to exit.

2. Preparation

Note:


- The other party's fax machine will print the date and time on the top of each page you send according to your unit's date and time setting.
- The accuracy of the clock is approximately ± 60 seconds a month.

To correct a mistake

Press [**◀**] or [**▶**] to move the cursor to the incorrect number, and make the correction.

2.6 Your logo

The logo can be your name or the name of your company.

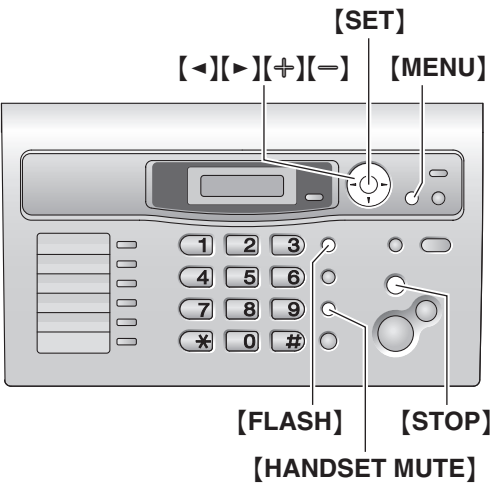

- 1 Press [**MENU**].

SYSTEM SETUP
PRESS [◀ ▶]

- 2 Press [**#**], then [**0**][**2**].

YOUR LOGO
PRESS SET

- 3 Press [**SET**].

- The cursor (■) will appear on the display.

LOGO=■

- 4 Enter your logo, up to 30 characters. See the following character table for details.

- 5 Press [**SET**].

SETUP ITEM []

- 6 Press [**MENU**] to exit.

Note:

- Your logo will be printed on the top of each page sent from your unit.

To select characters with the dial keypad

Keypad	Characters
[1]	Space # & ' () * , - . / 1
[2]	A B C 2 a b c 2

Keypad	Characters
[3]	D E F 3
	d e f 3
[4]	G H I 4
	g h i 4
[5]	J K L 5
	j k l 5
[6]	M N O 6
	m n o 6
[7]	P Q R S 7
	p q r s 7
[8]	T U V 8
	t u v 8
[9]	W X Y Z 9
	w x y z 9
[0]	Space 0
[*]	To change uppercase or lowercase letter.
[FLASH]	To enter a hyphen.
[HANDSET MUTE]	To insert a space.
[STOP]	To delete a digit.

Note:

- To enter another character that is located on the same dial key, press [►] to move the cursor to the next space.

To enter your logo**Example:** "BILL"

- Press [2] 2 times.

LOGO=B

- Press [4] 3 times.

LOGO=BI

- Press [5] 3 times.

LOGO=BIL

- Press [►] to move the cursor to the next space and press [5] 3 times.

LOGO=BILL

To change uppercase or lowercase letters

Pressing the [*] key will change to uppercase or lowercase alternately.

- Press [2] 2 times.

LOGO=B

- Press [4] 3 times.

LOGO=BI

- Press [*].

LOGO=Bi

- Press [5] 3 times.

LOGO=Bill

To correct a mistake


- Press [◀] or [▶] to move the cursor to the incorrect character.
- Press [STOP].
 - To erase all characters, press and hold [STOP].
- Enter the correct character.

To select characters using [+] or [-]

Instead of pressing the dial keys, you can select characters using [+] or [-].

- Press [-] repeatedly to display the desired character. Characters will be displayed in the following order:
 - Uppercase letters
 - Number
 - Symbol
 - Lowercase letters
 - If you press [+], the order will be reversed.
- Press [►] to insert the character.
- Return to step 1 to enter the next character.

2.7 Your fax number

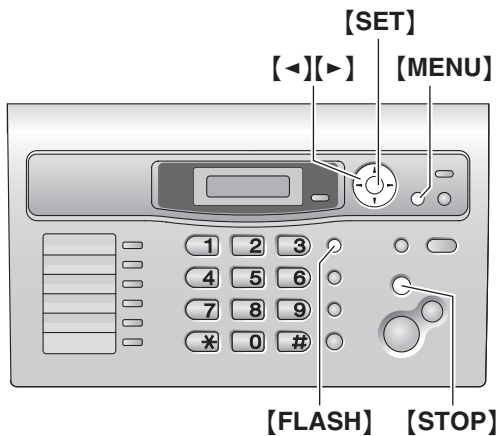

- 1 Press **[MENU]**.

SYSTEM SETUP
PRESS [◀ ▶]

- 2 Press **[⏏]**, then **[0][3]**.

YOUR FAX NO.
PRESS SET

- 3 Press **[SET]**.
 - The cursor (■) will appear on the display.

NO. = ■

- 4 Enter your fax number, up to 20 digits.

Example: NO. = 1234567 ■

- To enter a "+", press **[*]**.
- To enter a space, press **[⏏]**.
- To enter a hyphen, press **[FLASH]**.

- 5 Press **[SET]**.

SETUP ITEM []

- 6 Press **[MENU]** to exit.

Note:

- Your fax number will be printed on the top of each page sent from your unit.


To correct a mistake

1. Press **[◀]** or **[▶]** to move the cursor to the incorrect number.
2. Press **[STOP]**.
 - To erase all numbers, press and hold **[STOP]**.
3. Enter the correct number.

3.1 Phonebook

The phonebook allows you to make calls without having to dial manually. You can store 100 names and telephone numbers to the phonebook.

- You can also send faxes using the phonebook (page 29).

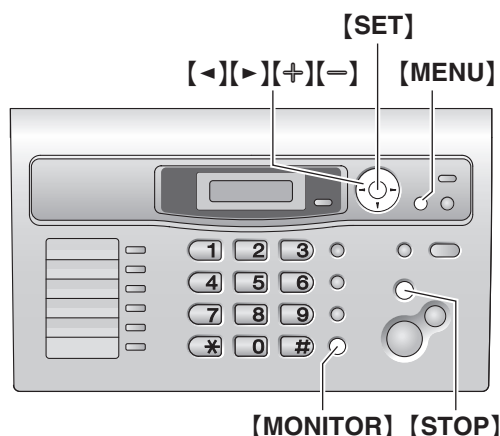

3.1.1 Storing phonebook items

- Press **[MENU]** repeatedly to display "PHONEBOOK SET".
- Press **[>]**.
 - The display shows the number of available items in the phonebook briefly.
- Enter the name, up to 16 characters (see page 18 for instructions).
- Press **[SET]**.
- Enter the telephone number, up to 24 digits.
- Press **[SET]**.
 - To program other items, repeat steps 3 to 6.
- Press **[MENU]** to exit.

Note:

- You can confirm the stored items by printing the telephone number list (page 63).

To correct a mistake

- Press **[<]** or **[>]** to move the cursor to the incorrect character/number.
- Press **[STOP]**.
 - To erase all characters/numbers, press and hold **[STOP]**.
- Enter the correct character/number.

3.1.2 Making a phone call using the phonebook

Before using this feature, store the desired names and telephone numbers in the phonebook (page 21).

- Press **[>]**.
 - Confirm that there are no documents in the document entrance.
- Press **[+]** or **[-]** repeatedly to display the desired item.
- Lift the handset or press **[MONITOR]**.
 - The unit will start dialling automatically.

To search for a name by initial

Example: "LISA"

- Press **[>]**.
 - Confirm that there are no documents in the document entrance.
- Press **[+]** or **[-]** to enter the phonebook.
- Press **[5]** repeatedly to display any name with the initial "L" (see the character table, page 18).
 - To search for symbols, press **[1]**.
- Press **[-]** repeatedly to display "LISA".
 - To stop the search, press **[STOP]**.
 - To dial the displayed party, lift the handset or press **[MONITOR]**.

3.1.3 Editing a stored item

- Press **[>]**.
 - Confirm that there are no documents in the document entrance.
- Press **[+]** or **[-]** repeatedly to display the desired item.
- Press **[MENU]**.
- Press **[*]**.
 - If you do not need to edit the name, skip to step 6.
- Edit the name. For further details, see the storing procedure on page 21.
- Press **[SET]**.
 - If you do not need to edit the telephone number, skip to step 8.
- Edit the telephone number. For further details, see the storing procedure on page 21.
- Press **[SET]**.
 - To edit other items, repeat steps 2 to 8.
- Press **[STOP]** to exit.

3.1.4 Erasing a stored item

- Press **[>]**.
 - Confirm that there are no documents in the document entrance.

3. Telephone


- 2 Press **[+]** or **[-]** repeatedly to display the desired item.
- 3 Press **[MENU]**.
- 4 Press **[⇐]**.
 - To cancel erasing, press **[STOP]**.
- 5 Press **[SET]**.
 - To erase other items, repeat steps 2 to 5.
- 6 Press **[STOP]** to exit.

3.2 One-touch dial feature

For rapid access to frequently dialed numbers, the unit provides the one-touch dial feature.

3.2.1 Storing one-touch dial items

- Station 1 to 3 can be used alternatively as broadcast keys (page 29).
- You can also send faxes using the one-touch dial feature (page 29).

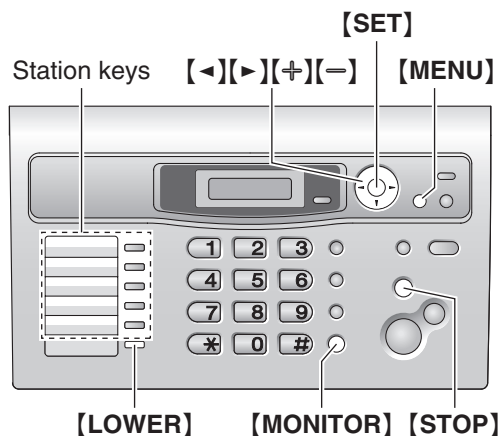

- 1 Press **[MENU]** repeatedly to display “PHONEBOOK SET”.
- 2 Select the desired station key.
For station 1–3:
Press one of the station keys, press **[+]** or **[-]** repeatedly to select “DIAL MODE”, then press **[SET]**.
For stations 4–5:
Press one of the station keys.
For stations 6–10:
Press **[LOWER]**, then press one of the station keys.
- 3 Enter the name, up to 16 characters (see page 18 for instructions).
- 4 Press **[SET]**.
- 5 Enter the telephone number, up to 24 digits.
- 6 Press **[SET]**.
 - To program other items, repeat steps 2 to 6.

- 7 Press **[STOP]** to exit.

Note:

- You can confirm the stored items by printing the telephone number list (page 63).

To correct a mistake

1. Press **[◀]** or **[▶]** to move the cursor to the incorrect character/number.
2. Press **[STOP]**.
 - To erase all characters/numbers, press and hold **[STOP]**.
3. Enter the correct character/number.

3.2.2 Making phone calls using the one-touch dial

Before using this feature, store the desired names and telephone numbers for the one-touch dial feature.

- 1 Lift the handset or press **[MONITOR]**.
- 2 Select the desired station key.

For stations 1–5:

Press the desired station key.

For stations 6–10:

Press **[LOWER]**, then press the desired station key.

- The unit will start dialling automatically.

3.2.3 Editing a stored item

- 1 Press **[▶]**.
 - Confirm that there are no documents in the document entrance.
- 2 Press **[+]** or **[-]** repeatedly to display the desired item.
- 3 Press **[MENU]**.
- 4 Press **[*]**.
 - If you do not need to edit the name, skip to step 6.
- 5 Edit the name. For further details, see the storing procedure on page 22.
- 6 Press **[SET]**.
 - If you do not need to edit the telephone number, skip to step 8.
- 7 Edit the telephone number. For further details, see the storing procedure on page 22.
- 8 Press **[SET]**.
 - To edit other items, repeat steps 2 to 8.
- 9 Press **[STOP]** to exit.

3.2.4 Erasing a stored item

- 1 Press **[▶]**.
 - Confirm that there are no documents in the document entrance.

- 2 Press **[+]** or **[-]** repeatedly to display the desired item.
- 3 Press **[MENU]**.
- 4 Press **[⇐]**.
 - To cancel erasing, press **[STOP]**.
- 5 Press **[SET]**.
 - To erase other items, repeat steps 2 to 5.
- 6 Press **[STOP]** to exit.

3.3 Caller ID service

This unit is compatible with the Caller ID service offered by your local telephone company. To use this unit's Caller ID features, you must subscribe to Caller ID service.

Important:

- This unit will only display the caller's telephone number and name.
- This unit will not support future additional telephone services.
- This unit cannot support services based on the "DTMF based subscriber line protocol".
- Depending on the service of the local telephone company, the date/time of the call or the caller's name may not be displayed.

Make sure the following ring setting is set to 2 or more rings beforehand.

- FAX ring setting (feature #06 on page 41)
- TEL/FAX ring setting (feature #78 on page 45)

3.3.1 How Caller ID is displayed

The calling party's name or telephone number will be displayed after the 1st ring. You then have the option of whether or not to answer the call.

The unit will automatically store caller information (name, telephone number and the time of the call) of the 30 most recent calls. Caller information is stored by the most recent to the oldest call. When the 31st call is received, the oldest call is deleted.

Caller information can be viewed on the display one item at a time (page 24) or confirmed by printing the Caller ID list (page 63).

- Caller information can be displayed up to 16 characters for the caller's name and 22 digits for the telephone number.
- When caller information is received and it matches a telephone number stored in the unit's one-touch dial or navigator directory, the stored name will be displayed.
- If the unit is connected to a PBX (Private Branch Exchange) system, caller information may not be received properly. Consult your PBX supplier.
- If the unit cannot receive caller information, the following will be displayed:
 - **"OUT OF AREA"**: The caller dialed from an area which does not provide Caller ID service.
 - **"PRIVATE CALLER"**: The caller requested not to send caller information.
 - **"LONG DISTANCE"**: The caller made a long distance call.

To confirm caller information by printing the Caller ID list

- To print manually, see page 63.
- To print automatically after every 30 new calls, activate feature #26 (page 42).

3.4 Viewing and calling back using caller information

You can easily view caller information and call back.


Important:

- Calling back will not be possible if the caller information does not include a telephone number.
- If the area code of the received telephone number is the same as yours, the area code may need to be deleted before calling back. This may only apply to some areas. To edit the number, see page 24.

The display will show the number of new calls in standby mode.

Example:

10 NEW CALLS
10:59

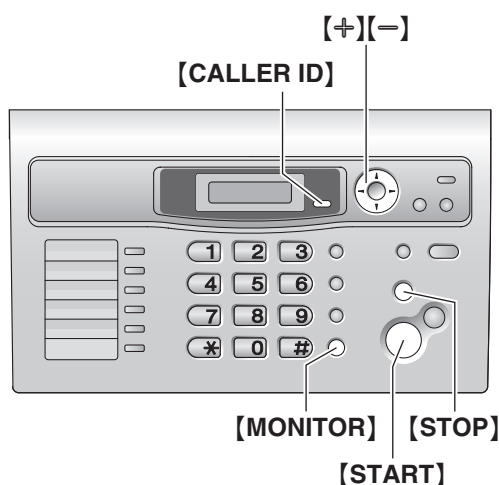

- 1 Press **[CALLER ID]**.
 - The display will show the number of new calls.
- 2 Press **[+]** to search from the recently received caller information.
 - If you press **[-]**, the display order will be reversed.
 - To stop viewing, press **[STOP]**.
- 3 Lift the handset or press **[MONITOR]** to return the call.
 - The unit will start dialling automatically.
 - To send a fax, insert the document FACE DOWN and press **[START]**.

To change the way caller information is displayed

Press **[CALLER ID]** repeatedly after the caller information is displayed.

Example:

SAM LEE
11:20 20 Jul ✓

 ↑↓

1345678901
11:20 20 Jul ✓

- A ✓ on the display means the item has already been viewed or answered.

Display while viewing

- When the unit could not receive a name, the display will show “NO NAME RCVD”.
- When no calls have been received, the display will show “NO CALLER DATA”.

3.5 Editing a caller's telephone number before calling back

- Keep the front cover page open for button locations.
- 1 Press **[CALLER ID]**.
 - 2 Press **[+]** or **[-]** repeatedly to display the desired item.
 - 3 Press **[CALLER ID]** repeatedly to display the telephone number.
 - 4 To insert a number in front of the telephone number, press the desired dial key (**[0]** to **[9]**).
 - You can also initiate the editing mode by pressing **[*]**.
 - 5 Lift the handset or press **[MONITOR]** to call back the edited number.
 - The unit will start dialling automatically.
 - To send a fax, insert the document FACE DOWN and press **[START]**.

Note:

- The edited telephone number will not be saved as caller information. To store it into the phonebook, see page 25.

To correct a mistake

1. Press **[<]** or **[>]** to move the cursor to the incorrect number.
2. Press **[STOP]** to delete the number.
3. Enter the correct number.

3.6 Erasing caller information

- Keep the front cover page open for button locations.

3.6.1 Erasing all caller information

- 1 Press **[MENU]** repeatedly to display “CALLER SETUP”.

- 2 Press **[SET]**.
 - “CALL LIST ERASE” will be displayed.
- 3 Press **[SET]**.
 - To cancel erasing, press **[STOP]**, then **[MENU]**.
- 4 Press **[SET]**.
- 5 Press **[STOP]** to exit.

3.6.2 Erasing specific caller information


- 1 Press **[CALLER ID]**.
- 2 Press **[+]** or **[-]** repeatedly to display the desired item.
- 3 Press **[<]**.
 - To cancel erasing, press **[STOP]** 2 times.
- 4 Press **[SET]**.
 - To erase other items, repeat steps 2 to 4.
- 5 Press **[STOP]** to exit.

3.7 Storing caller information into the phonebook / one-touch dial

Important:

- This feature is not available if the caller information does not include a telephone number.

3.7.1 Into the phonebook

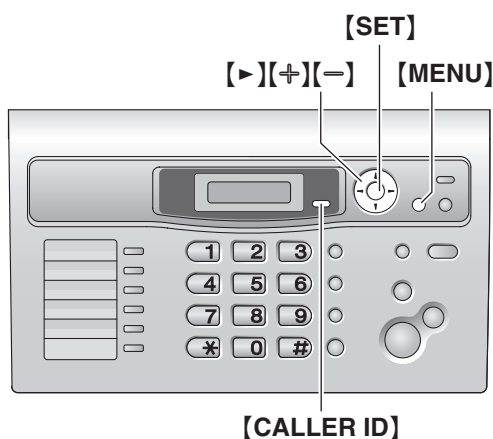


- 1 Press **[CALLER ID]**.
- 2 Press **[+]** or **[-]** repeatedly to display the desired item.
- 3 Press **[MENU]**.
- 4 Press **[>]**.
 - If you do not need to edit the name, skip to step 6.
- 5 If a name is required, enter up to 16 characters for the name (page 18).
- 6 Press **[SET]**.
 - If the number requires editing, see page 24.
- 7 Press **[SET]**.

Note:

- You can confirm the stored items in the phonebook by printing the telephone number list (page 63).
- To edit a name, see page 21.
- If caller information does not include the caller's name, enter the name manually. See the instructions on page 21.

3.7.2 Into the one-touch dial

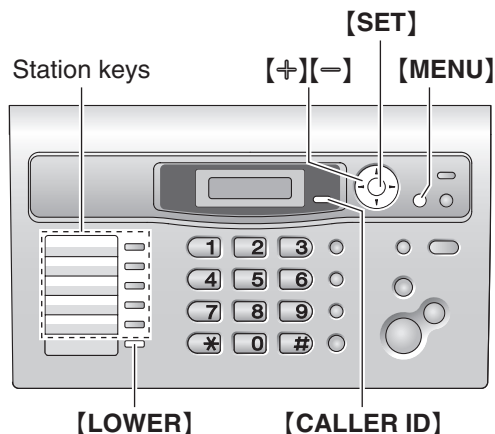


- 1 Press **[CALLER ID]**.
- 2 Press **[+]** or **[-]** repeatedly to display the desired item.
- 3 Press **[MENU]**.
- 4 Select a station key.
For station 1–3:
Press the desired station key, press **[+]** or **[-]** repeatedly to select “**DIAL MODE**”, then press **[SET]**.
For stations 4–5:
Press the desired station key.
For stations 6–10:
Press **[LOWER]**, then press the desired station key.
 - If you do not need to edit the name, skip to step 6.
- 5 If a name is required, enter up to 16 characters for the name (page 18).
- 6 Press **[SET]**.
 - If the number requires editing, see page 24.
- 7 Press **[SET]**.

Note:

- You can confirm the stored items in the one-touch dial by printing the telephone number list (page 63).
- To edit a name, see page 22.
- If caller information does not include the caller's name, enter the name manually. See the instructions on page 22.
- If you assign an item to a station key which already contains an item, the previous item will be replaced.
- Station 1 to 3 can be used alternatively as broadcast keys (page 29).

4.1 Sending a fax manually

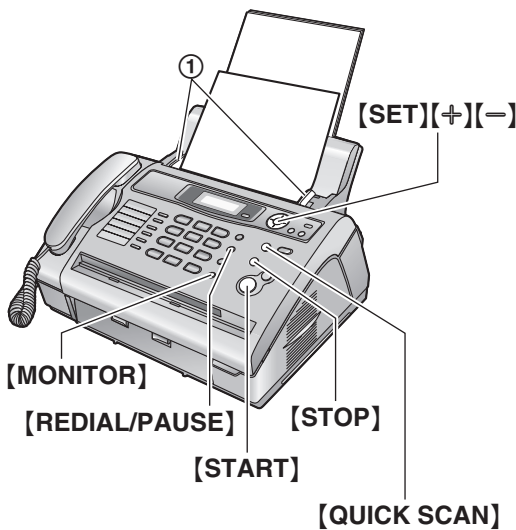

- 1 Adjust the width of the document guides (①) to fit the actual size of the document.
- 2 Insert the document (up to 15 pages) FACE DOWN until the unit grasps the document and a single beep is heard.
 - If the document guides are not adjusted to fit the document, re-adjust them.
- 3 If necessary, press **[+]** or **[-]** repeatedly to select the desired resolution.
- 4 Press **[MONITOR]**.
- 5 Dial the fax number.
- 6 **When a fax tone is heard:**
Press **[START]**.

When the other party answers your call:

Lift the handset and ask them to press their start button. When the fax tone is heard, press **[START]**.

Note:

- After pressing **[START]**, you can replace the handset.

To stop sending

Press **[STOP]**.

To select the resolution

Select the desired resolution according to the type of document.

- **“STANDARD”**: For printed or typewritten documents with normal-sized characters.
- **“FINE”**: For documents with small print.
- **“SUPER FINE”**: For documents with very small print. This setting is effective only when the other party has a compatible fax machines.

- **“PHOTO”**: For documents containing photographs, shaded drawings, etc.
- **“MIXED”** (Photo with text): For documents containing photographs and text.
- Using the **“FINE”**, **“SUPER FINE”**, **“PHOTO”** and **“MIXED”** settings will increase transmission time.
- If the resolution setting is changed during feeding, it will be effective from the next page.

To redial the last number

1. Press **[REDIAL/PAUSE]**.
2. Press **[START]**.
 - If the line is busy, the unit will automatically redial the number up to 5 times.
 - To cancel redialling, press **[STOP]**, then press **[SET]**.

To send more than 15 pages at a time

Insert the first 15 pages of the document. Add the other pages (up to 15 at a time) on top of the previously inserted pages while the last page is being fed into the unit.

To predial a fax number

You can dial the fax number first before inserting the document. This is convenient if you need to refer to the document for the other party's fax number.

1. Enter the fax number.
2. Insert the document.
3. Press **[START]**.

Sending from memory (Quick scan feature)

You can scan the document into memory before sending.

1. Insert the document.
2. Press **[QUICK SCAN]**.
3. Enter the fax number.
4. Press **[START]**.

Reserving the fax transmission (Dual Access)

You can reserve the fax transmission even when the unit is just receiving a fax or sending a fax from memory.

- Up to 3 reservations when sending
 - Up to 4 reservations when receiving
1. Insert the document during fax reception or fax memory transmission.
 2. Enter the fax number using the dial keypad, one-touch dial or phonebook.
 3. Press **[START]**.

- The document will be fed into the unit and scanned into memory. The unit will then send the data. If the document exceeds the memory capacity, transmission will be cancelled. You must send the entire document manually.

Printing a sending report


A sending report provides you with a printed record of transmission results. To print sending reports, make sure feature #04 is activated (page 41). For an explanation of error messages, see page 46.

Printing a journal report


A journal report provides you with a printed record of the 30 most recent faxes. To print manually, see page 63. To print automatically after every 30 new fax transmissions and receptions, make sure feature #22 is activated (page 42). For an explanation of error messages, see page 46.

4.2 Document requirements

Minimum document size

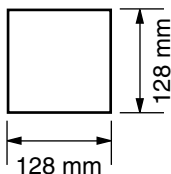


Maximum document size

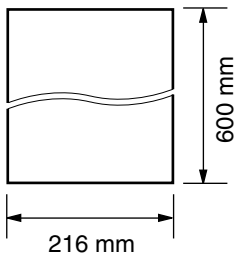

Effective scanning area

- Shaded area will be scanned.

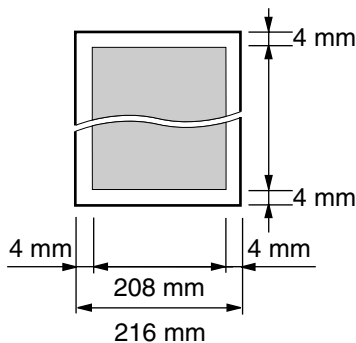

Document weight

- Single sheet:
45 g/m² to 90 g/m²
- Multiple sheets:
60 g/m² to 80 g/m²

Note:

- Remove clips, staples or other fasteners.

- Do not set the following types of documents: (Make a copy of the document using another copier and set the copy.)
 - Chemically treated paper such as carbon or carbonless duplicating paper
 - Electrostatically charged paper
 - Badly curled, creased or torn paper
 - Paper with a coated surface
 - Paper with a faint image
 - Paper with printing on the opposite side that can be seen through the other side, such as newsprint
- Check that ink, paste or correction fluid has dried completely.
- To set a document with a width of less than 210 mm, we recommend using a copy machine to copy the original document onto A4 or letter-sized paper, then setting the copied document.

4.3 Sending a fax using one-touch dial feature and phonebook

Before using this feature, store the desired names and telephone numbers into one-touch dial feature and phonebook (page 21, 22).

- Keep the front cover page open for button locations.
- 1 Adjust the width of the document guides to fit the actual size of the document.
 - 2 Insert the document (up to 15 pages) **FACE DOWN** until the unit grasps the document and a single beep is heard.
 - If the document guides are not adjusted to fit the document, re-adjust them.
 - 3 If necessary, press **[+]** or **[-]** repeatedly to select the desired resolution (page 27).
 - 4 Enter the fax number.

Using stations 1–5:

Press the desired station key.

Using stations 6–10:

Press **[LOWER]**, then press the desired station key.

Using phonebook:

Press **[>]**, then press **[+]** or **[-]** repeatedly to display the desired item.

- 5 Press **[START]**.

Fax auto redial

If the line is busy or if there is no answer, the unit will automatically redial the number up to 5 times.

- To cancel redialling, press **[STOP]**, then press **[SET]**.

If your unit does not send a fax

- Confirm that you have entered the number correctly, and that the number is a fax number.
- Confirm that the other party's fax machine is answering by turning **ON** the connecting tone feature (feature #76, page 45).

4.4 Broadcast transmission

By storing one-touch dial and phonebook items (page 21, 22) into the broadcast memory, you can send the same document to multiple parties (up to 20). Your programmed items will remain in the broadcast memory, allowing frequent re-use.

- The broadcast function utilises stations 1–3. The one-touch dial function will be cancelled.
- Keep the front cover page open for button locations.

4.4.1 Programming items into the broadcast memory

- 1 Press **[MENU]** repeatedly to display “**PHONEBOOK SET**”.
- 2 Select the desired broadcast key.

For BROADCAST 1-2:

1. Press the desired **[BROADCAST]** key.
2. Press **[+]** or **[-]** repeatedly to select “**BROADCAST**”.

For MANUAL BROADCAST:

1. Press **[MANUAL BROAD]**.
2. Press **[+]** or **[-]** repeatedly to select “**MANUAL BROAD**”.

- 3 Press **[SET]**.
- 4 Program items.

Using stations 1–5:

Press the desired station key.

Using stations 6–10:

Press **[LOWER]**, then press the desired station key.

Using phonebook:

Press **[+]** or **[-]** repeatedly to display the desired item, and press **[SET]**.

Using the dial keypad (only for MANUAL BROAD):

Enter the fax number and press **[SET]**.

- If you program the wrong item, press **[STOP]** to erase the item.
- To program other items, repeat this step (up to 20 items).

- 5 Press **[SET]** after programming all of the desired items.
 - To program another broadcast key, repeat steps 2 to 5.
- 6 Press **[STOP]** to exit.

Note:

- Confirm the stored items by printing a broadcast programming list (page 63).

4.4.2 Adding a new item into the broadcast memory

After initial programming, you can add new items (up to a combined total of 20).

- 1 Press **[>]**.
 - Confirm that there are no documents in the document entrance.
- 2 Press **[+]** or **[-]** repeatedly to display the desired broadcast memory ("**<BROADCAST1>**", "**<BROADCAST2>**" or "**<MANUAL BROAD>**").
- 3 Press **[MENU]**.
- 4 Press **[*]**.
- 5 Press **[+]** or **[-]** repeatedly to display the desired item you want to add.
- 6 Press **[SET]**.
 - To add other items, repeat steps 5 and 6 (up to 20 items).
- 7 Press **[STOP]** to exit.

Note:

- When adding new items to the MANUAL BROADCAST memory, you can only select stored items.

4.4.3 Erasing a stored item from the broadcast memory

- 1 Press **[>]**.
 - Confirm that there are no documents in the document entrance.
- 2 Press **[+]** or **[-]** repeatedly to display the desired broadcast memory ("**<BROADCAST1>**", "**<BROADCAST2>**" or "**<MANUAL BROAD>**").
- 3 Press **[MENU]**.
- 4 Press **[⇄]**.
- 5 Press **[+]** or **[-]** repeatedly to display the desired item you want to erase.
 - To cancel erasing, press **[STOP]**.
- 6 Press **[SET]**.
- 7 Press **[SET]**.
 - To erase other items, repeat steps 5 to 7.
- 8 Press **[STOP]** to exit.

4.4.4 Sending the same document to pre-programmed parties

- 1 Insert the document FACE DOWN.
- 2 If necessary, press **[+]** or **[-]** repeatedly to select the desired resolution (page 27).
- 3 Press the desired **[BROADCAST]** (1-2) or **[MANUAL BROAD]**.

- The document will be fed into the unit and scanned into memory. The unit will then send the data to each party, calling each number sequentially.
- After transmission, the stored document will be erased from memory automatically, and the unit will automatically print a report (**broadcast sending report**).

Note:

- If you select "**FINE**", "**SUPER FINE**", "**PHOTO**" or "**MIXED**" resolution, the number of pages that the unit can send will decrease.
- If the document exceeds the memory capacity, sending will be cancelled.
- If a party is busy or does not answer, it will be skipped and redialled later up to 5 times.

To cancel broadcast transmission

1. Press **[STOP]** repeatedly until "**SEND CANCELLED?**" is displayed.
2. Press **[SET]**.

4.5 Selecting the way to use your fax machine

Depending on your situation, select the way you prefer to use your fax machine.

- Use only as a fax (FAX ONLY mode)
- Use mostly as a telephone (TEL mode)
- Use as a telephone and/or fax (TEL/FAX mode)
- Use with answering machine


4.5.1 Use only as a fax (FAX ONLY mode)

Your situation

You have a separate telephone line just for faxes.

Setup

Set the fax machine to FAX ONLY mode (page 33) by pressing **[AUTO ANSWER]** repeatedly.

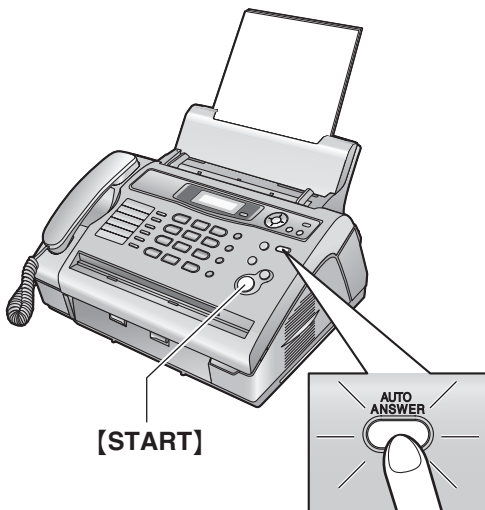

How faxes are received

All incoming calls will be answered as faxes.


4.5.2 Use mostly as a telephone (TEL mode)

Your situation

You want to answer calls by yourself. If a fax call is received, you must receive the fax manually.

Setup

Set the fax machine to TEL mode (page 33) by pressing **[AUTO ANSWER]** repeatedly.

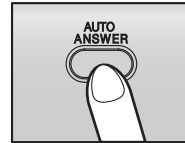

Note:

- Make sure feature #73 is set to “**TEL**” beforehand (page 44).

How to receive phone calls and faxes

You have to answer all calls manually.

To receive a fax, press **[START]**.


4.5.3 Use as a telephone and/or fax (TEL/FAX mode)

Your situation

You want to answer phone calls yourself and receive faxes automatically without rings.

Setup

Set the fax machine to TEL/FAX mode (page 34) by pressing **[AUTO ANSWER]** repeatedly.

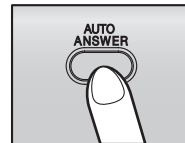

Note:

- Make sure feature #73 is set to “**TEL/FAX**” beforehand (page 44).

How phone calls and faxes are received

If the call is a phone call, the fax machine will ring.

If a fax calling tone is detected, the fax machine will receive the fax automatically without ringing.

4.5.4 Use with answering machine

Your situation

You want to use the fax machine with an answering machine.

Setup

Connect an answering machine and set the ring count of the answering machine to less than 4.

4. Fax

- Set the ring count in FAX ONLY mode of the fax machine to more than 4 (feature #06 on page 41), if you use with auto answer ON.

How to receive calls

When receiving phone calls, the answering machine will record voice messages.


4.6 Receiving a fax automatically – Auto answer ON

4.6.1 Activating FAX ONLY mode

Press **[AUTO ANSWER]** repeatedly to display the following.

FAX ONLY MODE

- The **[AUTO ANSWER]** indicator is ON.

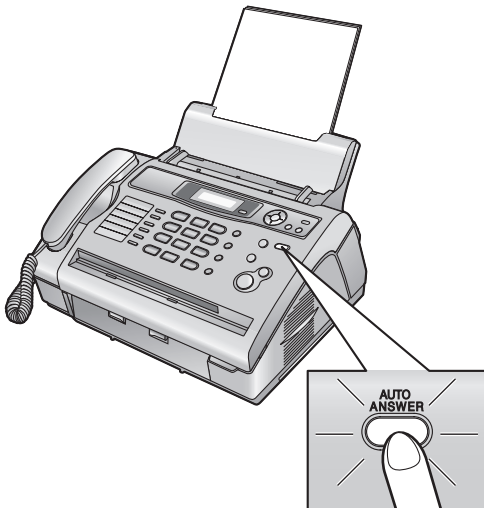

How faxes are received

When receiving calls, the unit will automatically answer all calls and only receive fax documents.

Note:

- The number of rings before a call is answered in FAX ONLY mode can be changed (feature #06 on page 41).


4.7 Receiving a fax manually – Auto answer OFF

4.7.1 Activating TEL mode

- 1 Make sure feature #73 is set to “TEL” beforehand (page 44).
- 2 Press **[AUTO ANSWER]** repeatedly to display the following.

TEL MODE

- The **[AUTO ANSWER]** indicator is OFF.

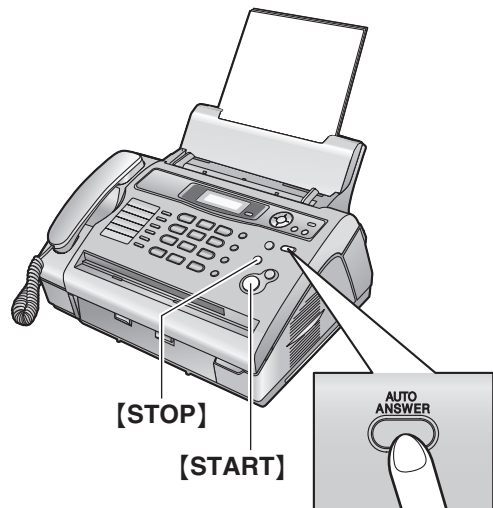

How to receive phone calls and faxes

1. Lift the handset to answer the call.
2. When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,
 press **[START]**.

CONNECTING

3. Replace the handset.
 - The unit will start fax reception.
 - If you do not answer the call within 15 rings, the unit will temporarily switch to fax reception. The other party can then send a fax.

4. Fax

How to use a telephone to receive faxes

If you have an extension telephone (a telephone connected to the **[EXT]** jack of this unit, or another telephone connected to the same telephone line as this unit), you can use the extension telephone to receive faxes.

1. When the extension telephone rings, lift the handset of the extension telephone.
2. When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,press **[*][*][*][9]** (default fax activation code) **firmly**.
 - The fax machine will start reception.
3. Replace the handset.

Note:

- To receive fax documents using an extension telephone, make sure remote fax activation is turned ON (feature #41 on page 43) beforehand. The default setting is ON. The fax activation code can also be changed.

To stop receiving


Press **[STOP]**.

4.7.2 Activating TEL/FAX mode

1. Make sure feature #73 is set to “**TEL/FAX**” beforehand (page 44).
2. Press **[AUTO ANSWER]** repeatedly to display the following.

TEL/FAX MODE

- The **[AUTO ANSWER]** indicator is OFF.
3. The ringer volume setting should be ON (page 17).

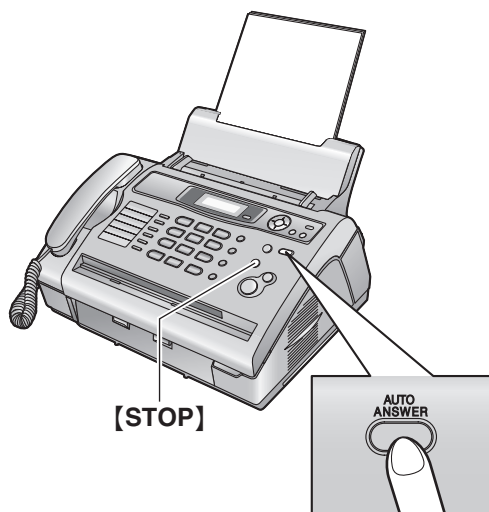

How phone calls and faxes are received

1. “**INCOMING CALL**” will be displayed but the unit will not ring.
2. The unit will wait for the duration of **2 rings** before answering the call.
 - The number of rings is determined by the “**TEL/FAX delayed ring setting**” (feature #78 on page 45).
 - During this time, an extension telephone will ring.
3. The unit will answer the call and try to detect a fax calling tone.

When a fax calling tone is detected

The unit receives the fax automatically without ringing.

When a fax calling tone is not detected

- ① The unit will ring **3 times**. You may answer the call.
 - The number of rings is determined by the “**Silent fax recognition ring setting**” (feature #30 on page 43).
 - Callers will hear a ring back tone different from the one generated by the telephone company.
 - An extension telephone (if connected to the same line) will not ring at this time. To answer the call with the extension telephone, lift the handset and press **[*][0]** (default auto disconnection code) while the fax machine is ringing.
- ② If you do not answer the call, the unit will activate the fax function.
 - Some fax machines do not generate fax calling tones when sending faxes, therefore the unit will try to receive a fax even if no fax calling tone is detected.


Note:

- The auto disconnection code can be changed in feature #49 on page 44.
- Even when you answer a call with the extension telephone and press the auto disconnection code, the fax machine may activate the fax function depending on the type of an extension telephone. Press **[STOP]** on the fax machine to talk with the calling party.

4.8 Using the unit with an answering machine

4.8.1 Setting up the fax machine and an answering machine

- 1 Connect the answering machine (①).
 - Answering machine is not included.
 - Remove the stopper (②) if attached.

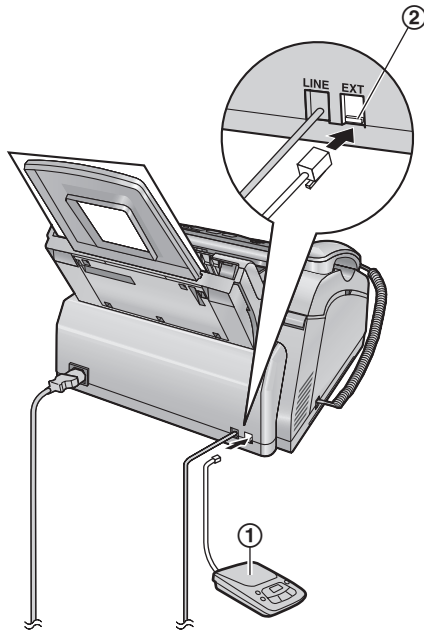

- 2 Set the number of rings on the answering machine to 4 rings or less.
 - This will allow the answering machine to answer the call first.
- 3 Record a greeting message on the answering machine.
 - We recommend you record a message up to 10 seconds long, and not to pause for more than 4 seconds during the message. Otherwise, both machines will not function correctly.
- 4 Activate the answering machine.
- 5 Set the fax machine to the desired receiving mode (page 33).
 - If you set to FAX ONLY mode, **change the ring setting in FAX ONLY mode to more than 4 (feature #06 on page 41).**
- 6 Check all or part of the following are not the same:
 - the remote access code of the answering machine
 - the fax activation code (feature #41 on page 43)

Receiving a voice message and fax document in one call

The caller can leave a voice message and send a fax document during the same call. Inform the caller of the following procedure beforehand.

1. The caller calls your unit.
 - The answering device will answer the call.
2. The caller can leave a message after the greeting message.
3. The caller presses [*][*][*][9] (pre-selected fax activation code).
 - The unit will activate the fax function.
4. The caller presses the start button to send a document.

Note:

- To use this feature, make sure remote fax activation is turned ON (Feature #41 on page 43). The fax activation code can also be changed.
- If there is no room left in memory of your answering machine, the unit may not be able to receive documents. See the operating instructions of the answering machine and erase unnecessary messages.

4.9 Receive polling (retrieving a fax placed on another fax machine)

This feature allows you to retrieve a document from another compatible machine. Therefore you pay for the call.

Make sure that no documents are fed into your unit and that the other party's machine is ready for your call.

- Keep the front cover page open for button locations.

- 1 Press [MENU] repeatedly to display "POLLING".

- 2 Press [SET].

- 3 Dial the fax number.

Using dial keys ([0] to [9], [*] or [#]):

Enter the fax number.

Using one-touch dial:

For stations 1–5

Press the desired station key.

For stations 6–10

Press [LOWER], then press the desired station key.

Using phonebook:

Press [+] or [–] repeatedly to display the desired item.

- 4 Press [START].
 - The unit will start reception.

4.10 Junk fax prohibitor (preventing fax reception from undesired callers)

If you subscribe to Caller ID service (page 23), this feature prevents fax reception from calls that do not show caller information.

Additionally, the fax machine will not accept faxes originating from numbers that match a programmable junk fax prohibitor list.

- Keep the front cover page open for button locations.

Important:

- **This feature does not work when manual reception is performed.**

4.10.1 Activating the junk fax prohibitor

- 1 Press **[JUNK FAX PROHIBITOR]**.
- 2 Press **[▶]**.
- 3 Press **[+]** or **[-]** repeatedly to select “ON”.
- 4 Press **[SET]**.
- 5 Press **[STOP]** to exit.
 - While the junk fax prohibitor is activated, “**JUNK FAX ON**” is displayed.

4.10.2 Storing undesired callers

You can register up to 20 undesired numbers from the caller information list (page 23) if you do not wish to receive faxes from them.

- 1 Press **[CALLER ID]**.
- 2 Press **[+]** or **[-]** repeatedly to display the party you wish to prevent fax reception from.
- 3 Press **[JUNK FAX PROHIBITOR]**.
- 4 Press **[SET]**.
 - To program other parties, repeat steps 2 to 4.
- 5 Press **[STOP]** to exit.

Note:

- If there is no space to store new items, “**LIST FULL**” is displayed in step 4. Erase unnecessary items.

To display the junk fax prohibitor list

1. Press **[JUNK FAX PROHIBITOR]**.
2. Press **[▶]** repeatedly to display “**JUNK LIST DISP.**”.
3. Press **[SET]**.
4. Press **[+]** or **[-]** to display the items on the list.
5. Press **[STOP]** to stop viewing.
6. Press **[STOP]** to exit.

To print the junk fax prohibitor list

1. Press **[JUNK FAX PROHIBITOR]**.


2. Press **[▶]** repeatedly to display “**JUNK LIST PRINT**”.
3. Press **[SET]**.
4. Press **[STOP]** to exit the list.

To erase an item from the junk fax prohibitor list

1. Press **[JUNK FAX PROHIBITOR]**.
2. Press **[▶]** repeatedly to display “**JUNK LIST DISP.**”.
3. Press **[SET]**.
4. Press **[+]** or **[-]** repeatedly to display the desired item.
5. Press **[◀]**.
 - To cancel erasing, press **[STOP]** 3 times.
6. Press **[SET]**.
 - The item is erased.
 - To erase other items, repeat steps 4 to 6.
7. Press **[STOP]** 2 times to exit the list.

5.1 Using with the ring detection feature

When you subscribe to a duplex ring service, your telephone company will assign you a new fax number and will also tell you the assigned ring pattern. Please complete the following setup on your fax machine to identify the assigned ring pattern.

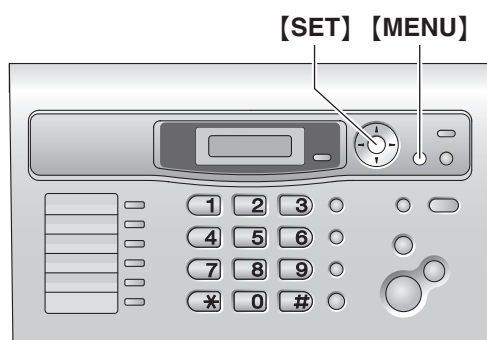


- 1 Press **[MENU]**.
- 2 Press **[**]** then **[3][1]**.
- 3 Press **[1]** to select "ON".
- 4 Press **[SET]**.
- 5 Press **[MENU]** to exit.

Note:

- Once you have programmed the assigned ring pattern into the fax machine, turn AUTO ANSWER ON.
- The fax machine will recognize incoming faxes on the second ring pattern and answer automatically. For phone calls, the fax machine will ring as a normal call.

6.1 Making a copy

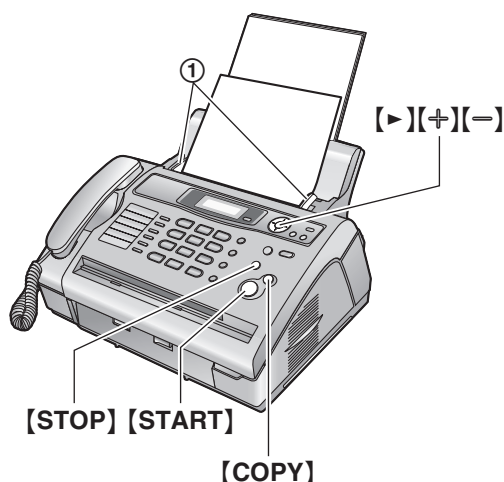

- 1 Adjust the width of the document guides (1) to fit the actual size of the document.
- 2 Insert the document (up to 15 pages) **FACE DOWN** until the unit grasps the document and a single beep is heard.
 - If the document guides are not adjusted to fit the document, re-adjust them.
- 3 If necessary, press [**+**] or [**-**] repeatedly to select the desired resolution.
- 4 Press [**COPY**].
- 5 If necessary, enter the number of copies (up to 99).
- 6 Press [**START**], or the unit will start copying within 20 seconds.
 - The unit will start copying.

Note:

- Any document which can be sent as a fax can also be copied (page 28).

To stop copying

Press [**STOP**].

To select the resolution

Select the desired resolution according to the type of document.

- “**FINE**”: For printed or typewritten documents with small print.
- “**SUPER FINE**”: For documents with very small print.
- “**PHOTO**”: For documents containing photographs, shaded drawings, etc.
- “**MIXED**” (Photo with text): For documents containing photographs and text.
- If you select “**STANDARD**”, copying will be done using “**FINE**” mode.

6.1.1 More copying features


To enlarge a document

1. Insert the document, then press [**COPY**].
2. Press [**>**].
3. Press [**+**] repeatedly to select from “105%” to “200%” by changing the enlargement rate 5% at a time.
4. Press [**START**].
 - The unit will only enlarge the centre of the upper part of the document. To make an enlarged copy of the bottom of the document, turn the document around, and then make a copy.

Example: 150% enlarged copy

Original document

Enlarged copy

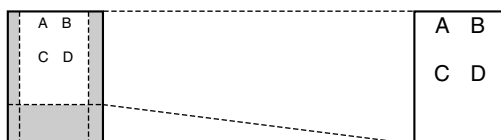


To reduce a document

1. Insert the document, then press [**COPY**].
2. Press [**>**].
3. Press [**-**] repeatedly to select from “50%” to “95%” by changing the reduction rate 5% at a time.
4. Press [**START**].

Example: 70% reduced copy

Original document

Reduced copy

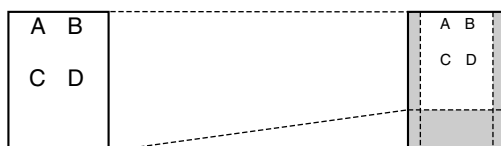


To collate multiple copies

The unit can collate multiple copies in the same order as the original document pages.

1. Insert the document, then press **[COPY]**.
2. Enter the number of copies (up to 99).
3. Press **[▶]** 2 times to display “**COLLATE OFF**”.
4. Press **[+]** or **[–]** repeatedly to display “**COLLATE ON**”.
5. Press **[START]**.

Example: Making 2 copies of a 4-page original document

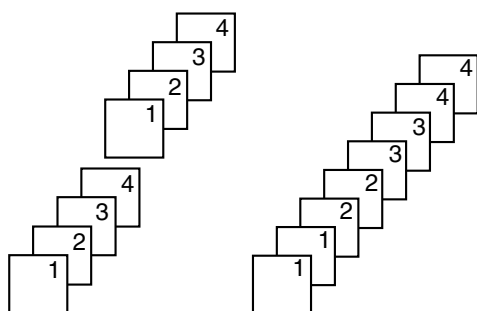


Collated pages

Uncollated pages

Note:

- The unit will store the documents into memory while collating the copies. The number of original document for collating copies depends upon the contents of pages and resolution. Approximately 80 pages of ITU-T No.1 Test Chart in “**FINE**” mode can be stored at a time, if the unit has no documents in memory. See page 64 of the specifications for details.
- If memory becomes full while storing, the unit will only print out the stored pages.
- After copying, the collating feature will turn OFF automatically.

7.1 Programming

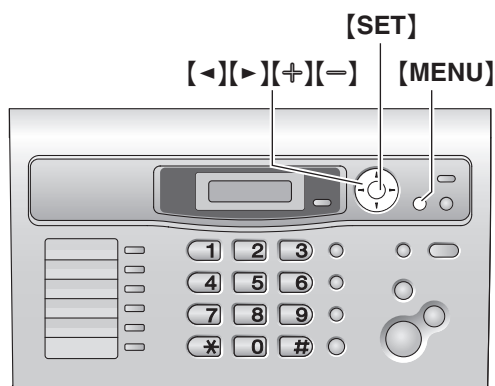

- 1 Press **[MENU]**.
- 2 Press **[◀][▶]** and the 2-digit code (page 41 to page 45).
- 3 Press the desired selection to display the desired setting.
 - This step may be slightly different depending on the feature.
- 4 Press **[SET]**.
- 5 Press **[MENU]** to exit.

To select features by using the navigator key

You can select a feature by using the navigator key instead of directly entering the program code (# and a 2-digit number).

1. Press **[MENU]**.
2. Select the feature you wish to program.

Basic features

Press **[◀]** or **[▶]** repeatedly to display the desired feature.

Advanced features

Press **[◀]** or **[▶]** repeatedly to display “**ADVANCE SETTINGS**”, then press **[SET]**.

Press **[◀]** or **[▶]** repeatedly to display the desired feature.

3. Press **[+]** or **[−]** repeatedly to display the desired setting.
 - This step may be slightly different depending on the feature.
4. Press **[SET]**.
 - The setting you selected is set, and the next feature will be displayed.
5. To exit programming, press **[MENU]**.

Note:

- To exit programming, press **[MENU]** at any time.

7.2 Basic features

Feature/Code	Selection
Setting the date and time [Ⓜ][0][1]	Enter the date and time using the dial keypad. See page 17 for details.
Setting your logo [Ⓜ][0][2]	Enter your logo using the dial keypad. See page 18 for details.
Setting your fax number [Ⓜ][0][3]	Enter your fax number using the dial keypad. See page 20 for details.
Printing a sending report [Ⓜ][0][4]	To print a sending report for fax transmission results (page 28). [1] “ON” : A sending report will be printed after every transmission. [2] “OFF” : Sending reports will not be printed. [3] “ERROR” (default): A sending report will be printed only when fax transmission fails.
Changing the ring setting in FAX ONLY mode [Ⓜ][0][6]	To change the number of rings before the unit answers a call in FAX ONLY mode. If you are using the unit with an answering machine, set to more than 4 (page 35). [1] “1” [2] “2” (default) [3] “3” [4] “4” [5] “5” [6] “6” [7] “7” [8] “8” [9] “9”
Setting the dialling mode [Ⓜ][1][3]	See page 16 for details.
Setting the ringer type of outside calls [Ⓜ][1][7]	[1] “RINGTONE 1” (default) [2] “RINGTONE 2” [3] “RINGTONE 3”

7.3 Advanced features

Feature/Code	Selection
Setting the journal report to print automatically [Ⓜ][2][2]	<p>[1] “ON” (default): The unit will print a journal report automatically after every 30 new fax transmissions and receptions (page 28).</p> <p>[2] “OFF”: The unit will not print a journal report, but will keep a record of the last 30 fax transmissions and receptions.</p>
Sending documents overseas [Ⓜ][2][3]	<p>If you cannot send a fax overseas even if the number is correct and the line is connected, activate this feature before sending the fax.</p> <p>This feature improves the reliability by reducing the transmission speed.</p> <p>[1] “NEXT FAX”: This setting is effective only for the next attempted fax transmission. After transmission, the unit will return to the previous setting.</p> <p>[2] “OFF”: Deactivates this feature.</p> <p>[3] “ERROR” (default): When the previous fax transmission fails and you wish to re-send the document.</p> <p>Note:</p> <ul style="list-style-type: none"> • This feature is not available for broadcast transmission. • Calling charges may be higher than usual.
Sending a fax at a specific time [Ⓜ][2][5]	<p>This feature allows you to take advantage of low-cost calling hours offered by your telephone company. This feature can be set up to 24 hours in advance of the desired time.</p> <p>[1] “ON”</p> <p>[2] “OFF” (default)</p> <p>To send a document:</p> <ol style="list-style-type: none"> 1. Insert the document. 2. If necessary, press [Ⓡ] or [Ⓢ] repeatedly to select the desired resolution (page 27). 3. Press [MENU]. 4. Press [Ⓜ], then [2][5]. 5. Press [1] to select “ON”. 6. Press [SET]. 7. Enter the fax number. <ul style="list-style-type: none"> • To enter an item using one-touch dial feature and phonebook, see step 4, “4.3 Sending a fax using one-touch dial feature and phonebook”, page 29. (When using phonebook, you do not have to press [➤] before pressing [Ⓡ] or [Ⓢ].) 8. Press [SET]. 9. Enter the transmission start time. <ul style="list-style-type: none"> • If you selected 12-hour time entry (page 17), press [✱] repeatedly to select AM or PM. • If you selected 24-hour time entry (page 17), the time is set using 24-hour time entry. 10. Press [SET]. <ul style="list-style-type: none"> • To cancel after programming, press [STOP] then [SET].
Setting the caller information list to print automatically [Ⓜ][2][6]	<p>[1] “ON”: The unit will print the caller information list automatically after every 30 new calls (page 23).</p> <p>[2] “OFF” (default): The unit will not print the caller information list, but will keep records of the information for the last 30 callers.</p>

Feature/Code	Selection
Changing the silent fax recognition ring setting [Ⓜ][3][0]	To change the number of times the unit rings while in TEL/FAX mode. [3] “3” (default) [4] “4” [5] “5” [6] “6” [7] “7” [8] “8” [9] “9” Note: • See page 34 for details.
Activating the Distinctive Ring feature [Ⓜ][3][1]	[1] “ON” [2] “OFF” (default) See page 37 for details.
Receiving other size documents [Ⓜ][3][7]	To receive a fax document that is longer than your recording paper. [1] “ON” (default): The unit will fit received documents onto your recording paper. [2] “OFF”: The unit will print the original size.
Changing the LCD display contrast [Ⓜ][3][9]	[1] “NORMAL” (default): For normal contrast. [2] “DARKER”: Used when the display contrast is too light.
Changing the fax activation code [Ⓜ][4][1]	If you wish to use an extension telephone to receive faxes, activate this feature and program the activation code. Important: • The fax activation code must be different from the code that you programmed on the answering machine. [1] “ON” (default) [2] “OFF” 1. Press [MENU]. 2. Press [Ⓜ], then [4][1]. 3. Press [1] to select “ON”. 4. Press [SET]. 5. Enter your code from 2 to 4 digits, using 0–9, [*] and [Ⓜ]. • The default code is “***9”. • Do not enter “0000”. 6. Press [SET]. 7. Press [MENU].
Setting the memory reception alert [Ⓜ][4][4]	To alert you with a beeping sound when a received fax document is stored into memory due to some existing problem. The slow beeps will continue until you clear the printing problem and make sure the unit is supplied with enough paper to print the stored document. [1] “ON” (default): You will be alerted to a reception problem by a beeping sound. [2] “OFF”: Deactivates this feature.
Setting friendly reception [Ⓜ][4][6]	To receive a fax automatically when you answer a call and hear a fax calling tone (slow beep). [1] “ON” (default): You do not have to press [START] for fax reception. [2] “OFF”: You have to press [START] for fax reception.

7. Programmable Features

Feature/Code	Selection
Setting the auto disconnection [Ⓜ][4][9]	To answer a call with an extension telephone in TEL/FAX mode (page 34), activate this feature and program the code. [1] "ON" (default) [2] "OFF" <ol style="list-style-type: none">1. Press [MENU].2. Press [Ⓜ], then [4][9].3. Press [1] to select "ON".4. Press [SET].5. Enter your code from 2 to 4 digits, using 0–9 and [*].<ul style="list-style-type: none">• The default code is "*0".6. Press [SET].7. Press [MENU].
Setting the scan contrast [Ⓜ][5][8]	To send or copy a document with faint or dark writing, set this feature before transmission or copying. [1] "NORMAL" (default): Used for normal writing. [2] "LIGHT": Used for dark writing. [3] "DARKER": Used for faint writing. Note: <ul style="list-style-type: none">• This feature is not available for photo and mixed resolution.
Setting the Error Correction Mode (ECM) [Ⓜ][6][8]	This feature is available when the sending/receiving fax machines are ECM compatible. [1] "ON" (default): If there is an error during fax transmission / reception, the fax machine will support the communication. [2] "OFF": Deactivates this feature.
Setting flash time [Ⓜ][7][2]	The flash time depends on your telephone exchange or host PBX. [0] "80msec" [1] "90msec" [2] "100msec" [3] "110msec" [4] "160msec" [5] "200msec" [6] "250msec" [7] "300msec" [8] "400msec" [9] "600msec" [*] "700msec" (default) [Ⓜ] "900msec" Note: <ul style="list-style-type: none">• If the fax machine is connected via a PBX, PBX functions (transferring a call, etc.) might not work correctly. Consult your PBX supplier for the correct setting.
Changing the receiving mode in the manual answer setting [Ⓜ][7][3]	[1] "TEL" (default): Telephone mode (page 33) [2] "TEL/FAX": Telephone/Fax mode (page 34)

Feature/Code	Selection
Setting the connecting tone [#][7][6]	<p>If you often have trouble when sending faxes, this feature allows you to hear connecting tones: fax tone, ring back tone and busy tone. You can use these tones to confirm the status of the other party's machine.</p> <p>[1] "ON" (default): You will hear connecting tones.</p> <p>[2] "OFF": Deactivates this feature.</p> <ul style="list-style-type: none"> • If the ring back tone continues, the other party's machine may not be a fax machine or may have run out of paper. Check with the other party. • The connecting tone volume cannot be adjusted.
Changing the TEL/FAX delayed ring setting [#][7][8]	<p>If you use an extension telephone when this unit is in TEL/FAX mode, select the desired number of times the extension telephone rings before the unit answers the call.</p> <p>[1] "1"</p> <p>[2] "2" (default)</p> <p>[3] "3"</p> <p>[4] "4"</p> <p>[5] "5"</p> <p>[6] "6"</p> <p>[7] "7"</p> <p>[8] "8"</p> <p>[9] "9"</p> <p>Note:</p> <ul style="list-style-type: none"> • See page 34 for details.
Setting toner save feature [#][7][9]	<p>[1] "ON": The toner cartridge will last longer.</p> <p>[2] "OFF" (default): Deactivates this feature.</p> <p>Note:</p> <ul style="list-style-type: none"> • This feature may lower the print quality by reducing toner consumption.
Resetting advanced features to their default settings [#][8][0]	<p>[1] "YES"</p> <p>[2] "NO" (default)</p> <p>To reset the advanced features:</p> <ol style="list-style-type: none"> 1. Press [MENU]. 2. Press [#], then [8][0]. 3. Press [1] to select "YES". 4. Press [SET]. 5. Press [SET] again. 6. Press [MENU].

8.1 Error messages – Reports

If a problem occurs during fax transmission or reception, one of the following messages will be printed on the sending and journal reports (page 28).

Message	Code	Cause & Solution
COMMUNICATION ERROR	40-42 46-72 FF	<ul style="list-style-type: none"> • A transmission or reception error occurred. Try again or check with the other party.
	43 44	<ul style="list-style-type: none"> • A line problem occurred. Connect the telephone line cord to a different jack and try again. • An overseas transmission error occurred. Try using the overseas mode (feature #23, page 42).
DOCUMENT JAMMED	-----	<ul style="list-style-type: none"> • The document is jammed. Remove the jammed document (page 59).
ERROR-NOT YOUR UNIT	53 54 59 70	<ul style="list-style-type: none"> • A transmission or reception error occurred because of a problem with the other party's fax machine. Check with the other party.
JUNK FAX PROH. REJECT	-----	<ul style="list-style-type: none"> • The junk fax prohibitor feature of this unit rejected fax reception.
MEMORY FULL	-----	<ul style="list-style-type: none"> • The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (page 14) or clear the jammed paper (page 56).
NO DOCUMENT	-----	<ul style="list-style-type: none"> • The document was not fed into the unit properly. Re-insert it and try again.
OTHER FAX NOT RESPONDING	-----	<ul style="list-style-type: none"> • The other party's fax machine is busy or has run out of recording paper. Try again. • The other party's fax machine rings too many times. Send the fax manually (page 27). • The other party's machine is not a fax machine. Check with the other party. • The number you dialled is not in service.
PRESSED THE STOP KEY	-----	<ul style="list-style-type: none"> • [STOP] was pressed and fax communication was cancelled.
THE COVER WAS OPENED	-----	<ul style="list-style-type: none"> • The front cover was opened. Close it and try again.
OK	-----	<ul style="list-style-type: none"> • Fax transmission or reception was successful.

8.2 Error messages – Display

If the unit detects a problem, one or more of the following messages will appear on the display.

Display	Cause & Solution
“CALL SERVICE”	<ul style="list-style-type: none"> There is something wrong with the unit. Contact our service personnel.
“CHANGE DRUM” “CHANGE SUPPLIES”	<ul style="list-style-type: none"> There is something wrong with the drum unit. Replace the drum unit and the toner cartridge (page 53).
“CHECK DOCUMENT”	<ul style="list-style-type: none"> The document was not fed into the unit properly. Re-insert the document. If misfeeding occurs frequently, clean the document feeder rollers (page 60) or adjust the feeder pressure (page 60) and try again.
“CHECK DRUM”	<ul style="list-style-type: none"> The drum unit is not inserted properly. Re-insert it correctly (page 10).
“COVER OPEN”	<ul style="list-style-type: none"> The front cover is open. Close it.
“DRUM LIFE OVER REPLACE DRUM” “CHANGE SUPPLIES”	<ul style="list-style-type: none"> The drum life is complete. Replace the drum unit immediately (page 53).
“FAILED PICK UP”	<ul style="list-style-type: none"> Recording paper was not fed into the unit properly. Re-insert the recording paper (page 58).
“FAX IN MEMORY”	<ul style="list-style-type: none"> The unit has a document in memory. See the other displayed message instructions to print out the document. For fax memory capacity, see page 64.
“LOW TEMP.”	<ul style="list-style-type: none"> The inside of the unit is extremely cold and cannot be operated. Use the unit in a warmer area. While the unit cannot be operated, the received documents are temporarily stored into the memory, and will be printed out automatically when the unit warms up.
“MEMORY FULL”	<ul style="list-style-type: none"> When performing memory transmission, the document being stored exceeded the memory capacity of the unit. Send the entire document manually. When making a copy, the document being stored exceeded the memory capacity of the unit. Press [STOP] to clear the message. Divide the document into sections. There is no space to store new items in phonebook. Erase unnecessary items (page 21).
“MODEM ERROR”	<ul style="list-style-type: none"> There is something wrong with the unit's modem. Contact our service personnel.
“NO FAX REPLY”	<ul style="list-style-type: none"> The other party's fax machine is busy or has run out of recording paper. Try again.
“OUT OF PAPER”	<ul style="list-style-type: none"> Recording paper is not installed or the unit has run out of paper. Install paper (page 14). Recording paper is not fed into the unit properly. Re-install paper (page 14).
“PAPER JAMMED”	<ul style="list-style-type: none"> A recording paper jam occurred. Clear the jammed paper (page 56).
“PLEASE WAIT”	<ul style="list-style-type: none"> The unit is warming up. Wait for a while.
“POLLING ERROR”	<ul style="list-style-type: none"> The other party's fax machine does not offer the polling function. Check with the other party.
“REDIAL TIME OUT”	<ul style="list-style-type: none"> The other party's fax machine is busy or has run out of recording paper. Try again.
“REMOVE DOCUMENT”	<ul style="list-style-type: none"> The document is jammed. Remove the jammed document (page 59). The document is longer than 600 mm. Press [STOP] to remove the document. Divide the document into two or more sheets and try again.

Display	Cause & Solution
"REPLACE DRUM SOON"	<ul style="list-style-type: none">● The drum life is near to an end. Replace the drum unit as soon as possible (page 53).
"RX MEMORY FULL"	<ul style="list-style-type: none">● The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (page 14) or clear the jammed paper (page 56).
"TONER EMPTY" "CHANGE SUPPLIES"	<ul style="list-style-type: none">● The toner life is complete. Replace the toner cartridge immediately (page 53).
"TONER LOW" "CHANGE SUPPLIES"	<ul style="list-style-type: none">● The toner life is near to an end. Replace the toner cartridge as soon as possible (page 53).
"TRANSMIT ERROR"	<ul style="list-style-type: none">● A transmission error occurred. Try again.
"WARM UP"	<ul style="list-style-type: none">● The inside of the unit is cold. Let the unit warm up. Wait for a while.
"WRONG PAPER"	<ul style="list-style-type: none">● The fax message was printed on paper which is shorter than A4 size paper. Use the appropriate size paper (page 65).

8.3 When a function does not work, check here

8.3.1 Initial settings

Problem	Cause & Solution
I cannot hear a dial tone.	<ul style="list-style-type: none"> • The telephone line cord is connected to the [EXT] jack on the unit. Connect to the [LINE] jack (page 15). • If you use a splitter/coupler to connect the unit, remove the splitter/coupler and connect the unit to the wall jack directly. If the unit operates properly, check the splitter/coupler. • Disconnect the unit from the telephone line and connect a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your telephone company. • The power cord or telephone line cord is not connected. Check the connections. • If you connected the fax machine through a computer modem, connect the fax machine directly to a telephone line jack.
I cannot make calls.	<ul style="list-style-type: none"> • The dialling mode setting may be wrong. Change the setting (feature #13 on page 16).
The unit does not ring.	<ul style="list-style-type: none"> • The ringer volume is turned OFF. Adjust it (page 17).

8.3.2 General

Problem	Cause & Solution
The other party complains they only hear a fax tone and cannot talk.	<ul style="list-style-type: none"> • FAX ONLY mode is set. Tell the other party the number is only used for faxes. • Change to TEL mode (page 33) or TEL/FAX mode (page 34).
The [REDIAL/PAUSE] button does not function properly.	<ul style="list-style-type: none"> • If this button is pressed during dialling, a pause will be inserted. If pressed immediately after a dial tone is obtained, the last number dialled will be redialled.
The receiving mode does not function properly.	<ul style="list-style-type: none"> • Distinctive Ring is set (feature #31 on page 37).
During programming, I cannot enter the code or ID number.	<ul style="list-style-type: none"> • All or part of the number is the same. Change the number: feature #41 (page 43) and #49 (page 44).
The unit beeps.	<ul style="list-style-type: none"> • The memory reception alert of feature #44 is ON (page 43), and the unit has a document in memory. Press [STOP] to stop the beeps, then see the displayed message instructions to solve the problem.
The recording paper does not stack properly on the paper stacker.	<ul style="list-style-type: none"> • High humidity may cause the recording paper to curl. Try turning the paper over and re-inserting it. If the curl on the paper is heavy, please remove it from the paper stacker. If you still have this problem, contact our service personnel.

8.3.3 Fax – sending

Problem	Cause & Solution
I cannot send documents.	<ul style="list-style-type: none">• The telephone line cord is connected to the [EXT] jack on the unit. Connect to the [LINE] jack (page 15).• The other party's fax machine is busy or has run out of recording paper. Try again.• The other party's machine is not a fax machine. Check with the other party.• The other party's fax machine failed to answer the fax automatically. Send the fax manually (page 27).
I cannot send a fax overseas.	<ul style="list-style-type: none">• Use the overseas transmission mode (feature #23 on page 42).• Add two pauses at the end of the telephone number or dial manually.
The other party complains that letters on their received document are distorted or not clear.	<ul style="list-style-type: none">• If your line has special telephone services such as call waiting, the service may have been activated during fax transmission. Connect the unit to a line that does not have these services.• Another telephone on the same line is off the hook. Hang up the telephone and try again.• The original document is too dark or too light. Change the scan contrast (feature #58 on page 44) to "LIGHT" or "DARKER", and try again.• Try copying the document. If the copied image is clear, there may be something wrong with the other party's machine.
The other party complains that black lines, white lines or smudges appear on their received document.	<ul style="list-style-type: none">• The glass or rollers are dirty with correction fluid, etc. Clean them (page 60). Please do not insert a document before correction fluid has dried completely.



8.3.4 Fax – receiving

Problem	Cause & Solution
I cannot receive documents.	<ul style="list-style-type: none">• The telephone line cord is connected to the [EXT] jack on the unit. Connect to the [LINE] jack (page 15).
I cannot receive documents automatically.	<ul style="list-style-type: none">• The receiving mode is set to TEL mode. Set to FAX ONLY mode (page 33) or TEL/FAX mode (page 34).• The time taken to answer the call is too long. Decrease the number of rings before the unit answers a call (feature #06 on page 41 and feature #78 on page 45).
The display shows "CONNECTING", but faxes are not received.	<ul style="list-style-type: none">• The incoming call is not a fax. Change the receiving mode to TEL mode (page 33) or TEL/FAX mode (page 34).
A blank sheet is ejected.	<ul style="list-style-type: none">• The other party placed the document in their fax machine the wrong way. Check with the other party.

Problem	Cause & Solution
The printing quality is poor.	<ul style="list-style-type: none"> • If documents can be copied properly, the unit is working normally. The other party may have sent a faint document or there may be something wrong with the other party's machine. Ask them to send a clearer copy of the document or to check their fax machine. • Some paper has instructions recommending which side to print on. Try turning the paper over. • You may have used paper with a cotton and/or fibre content that is over 20%, such as letterhead or resume paper. • The remaining toner is low. Replace the toner cartridge (page 53). • To check the drum life and quality, please print the printer test list (page 63). If printing quality is still poor, replace the toner cartridge and drum unit. • The toner save mode is ON (feature #79 on page 45). • The glass or rollers are dirty with correction fluid, etc. Clean them (page 60). Please do not insert a document before correction fluid has dried completely.
When an extension telephone is connected, I cannot receive documents by pressing [*][*][*][9].	<ul style="list-style-type: none"> • You must set remote fax activation to ON (feature #41 on page 43) beforehand. • Press [*][*][*][9] firmly. • You may have changed the remote fax activation code from [*][*][*][9] (default setting). Verify the remote fax activation code (feature #41 on page 43). • The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (page 14) or clear the jammed paper (page 56).
The other party complains that they cannot send a document.	<ul style="list-style-type: none"> • The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (page 14) or clear the jammed paper (page 56). • The unit is not in FAX ONLY mode. Press [AUTO ANSWER] repeatedly to turn ON the [AUTO ANSWER] indicator.
I cannot select the desired receiving mode.	<ul style="list-style-type: none"> • If you want to set FAX ONLY mode: <ul style="list-style-type: none"> – press [AUTO ANSWER] repeatedly to turn ON the [AUTO ANSWER] indicator. • If you want to set TEL mode or TEL/FAX mode: <ul style="list-style-type: none"> – select the desired mode using feature #73 (page 44), and press [AUTO ANSWER] repeatedly to turn OFF the [AUTO ANSWER] indicator. • The Distinctive Ring of feature #31 is activated (page 37).

8.3.5 Copying

Problem	Cause & Solution
The unit will not make a copy.	<ul style="list-style-type: none"> • You cannot make a copy during programming. Make the copy after programming. • The document was not fed into the unit properly. Re-insert the document. • Recording paper is not installed or the unit has run out of paper. Install paper (page 14).
A black line, a white line or smudge appears on the copied document.	<ul style="list-style-type: none"> • The glass or rollers are dirty with correction fluid, etc. Clean them (page 60). Please do not insert a document before correction fluid has dried completely.

Problem	Cause & Solution	
The printing quality is poor.	Original	Copy
		
	<ul style="list-style-type: none">• Some paper has instructions recommending which side to print on. Try turning the paper over.• You may have used paper with a cotton and/or fibre content that is over 20%, such as letterhead or resume paper.• The remaining toner is low. Replace the toner cartridge (page 53).• To check the drum life and quality, please print the printer test list (page 63). If printing quality is still poor, replace the toner cartridge and drum unit.• The toner save mode of feature #79 is ON (page 45).• The original document is too dark or too light. Change the scan contrast (feature #58 on page 44) to “LIGHT” or “DARKER”, and try again.	

8.3.6 Using an answering machine

Problem	Cause & Solution
I cannot receive documents automatically.	<ul style="list-style-type: none">• Your greeting message on the answering machine is too long. Shorten the message. Record a message up to 10 seconds long.• The answering machine rings too many times. Set to 1 or 2 rings.
I cannot receive voice messages.	<ul style="list-style-type: none">• Check if the answering machine is turned ON and connected to the fax machine properly (page 35).• Set the number of rings on the answering machine to 1 or 2.
I pressed the remote access code to access the answering machine remotely, but the line was disconnected.	<ul style="list-style-type: none">• The code may include “#” which is used for certain features provided by telephone companies. Change the code on the answering machine to another number which does not include “#”.
Callers complain that they cannot send a document.	<ul style="list-style-type: none">• There is no room left in memory of your answering machine to record voice messages. See the operating instructions of the answering machine and erase unnecessary messages.• You set the answering machine to only give a greeting message.

8.3.7 If a power failure occurs

- The unit will not function.
- The unit is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.
- Fax transmission and reception will be interrupted.
- Any sending documents stored in the memory or any documents during reception will be lost. When power is restored, a power down report will be printed out stating which contents in the memory have been erased.

8.4 Replacing the toner cartridge and the drum unit

When the display shows the following, replace the toner cartridge.

TONER LOW

TONER EMPTY


To check the drum life and quality, please print the printer test list (page 63) and refer to page 66 for information on the drum life. If printing quality is still poor, replace the toner cartridge and drum unit. To ensure that the unit operates properly, we recommend the use of **Panasonic toner cartridge (Model No. KX-FAT90E) and drum unit (Model No. KX-FAD91E)**. See page 8 for accessory information.

To maintain print quality and machine life, we recommend you to clean slots and openings (page 4) and the inside of the unit (page 60) when replacing the toner cartridge and/or drum unit.


Caution:

- We cannot be responsible for any damage to the unit or degradation of print quality which may occur from the use of a non-Panasonic toner cartridge and drum unit.
- The drum unit contains a photosensitive drum. Exposing it to light may damage the drum. Once you have opened the protection bag:
 - Do not expose the drum unit to light for more than 5 minutes.
 - Do not touch or scratch the black drum surface.
 - Do not place the drum unit near dust or dirt, or in a high humidity area.
 - Do not expose the drum unit to direct sunlight.
- Do not unplug the fax machine. Loss of fax documents in memory may occur.
- Do not leave the toner cartridge out of the protection bag for a long time. It will decrease the toner life.
- Do not add toner to the toner cartridge.


- 1 Before opening the protection bag of the new toner cartridge, shake it vertically more than 5 times.

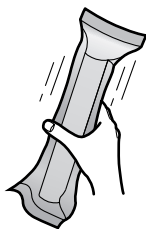

- 2 Remove the new toner cartridge from the protection bag. Peel off the seal (①) from the toner cartridge.

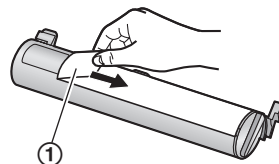


- 3 Remove the handset and document stacker.
- 4 Lift open the front cover (①), holding the OPEN tab (②).

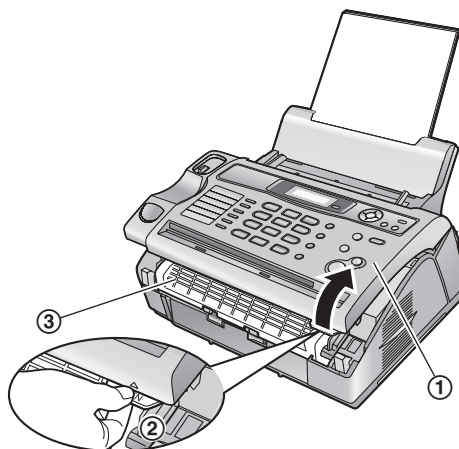

Caution:

The fuser unit (③) gets hot. Do not touch it.


- 5 Remove the drum and toner unit (①) by holding the two tabs.

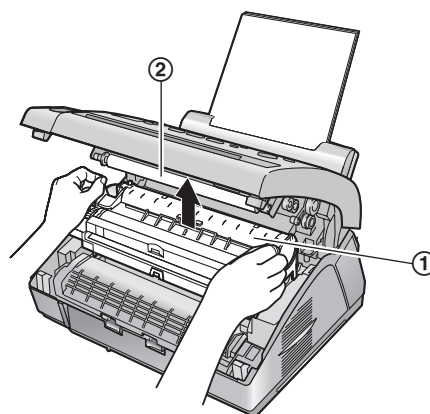


- Do not touch the transfer roller (②).
- If you replace the toner cartridge and the drum unit at the same time, skip to step 9.

- If you replace only the toner cartridge, tap on the used toner cartridge several times to allow the remaining toner to fall into the drum unit before removing.

- 6** Turn the two levers (①) on the used toner cartridge firmly, until the triangles (②) match.

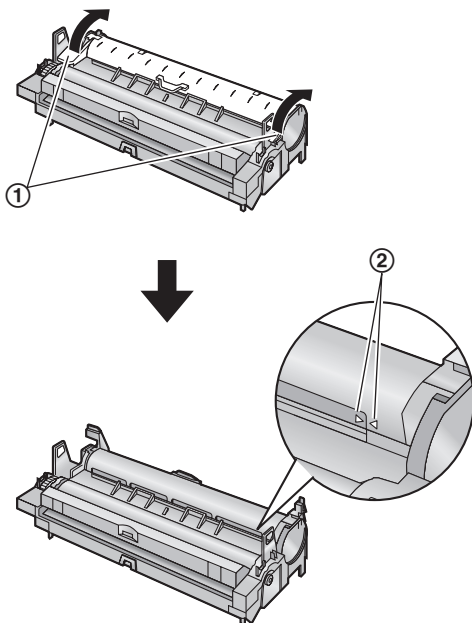


- 7** Remove the used cartridge (①) from the drum unit (②).

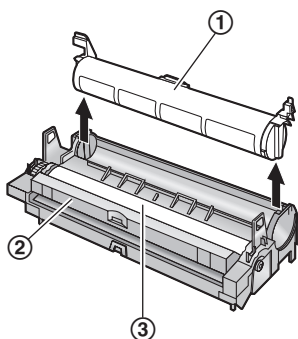

- The toner may stick to the cartridge and the drum unit. Be careful when handling. See page 4 for details.
- Do not drop the toner on the black drum surface (③).
- Put the used toner cartridge into the protection bag.

- 8** Insert the cleaner (①) fully into the groove (②) of the drum unit and move it from side to side at least 3 times to clean the inside of the drum unit.

- Repeat for the other groove.

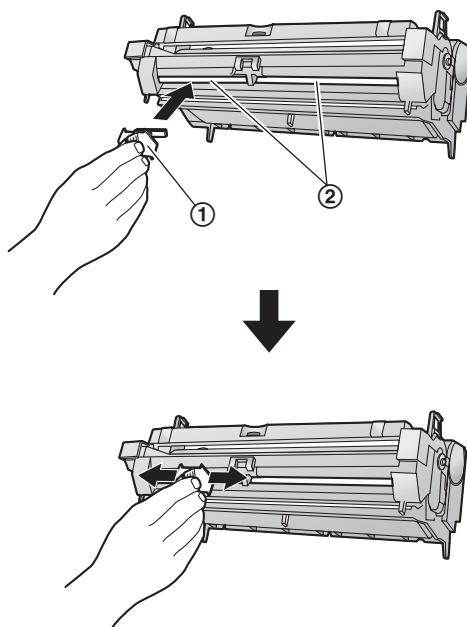


Note:


- Be sure to clean all the way to the edge of each groove.

- 9** If you replace the drum unit at the same time, remove the new drum unit from the protection bag.


Place the new toner cartridge (①) into the drum unit (②) vertically.

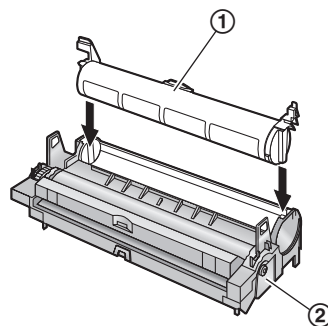


- 10** Turn the lever (①) on each side of the toner cartridge while pressing down firmly.

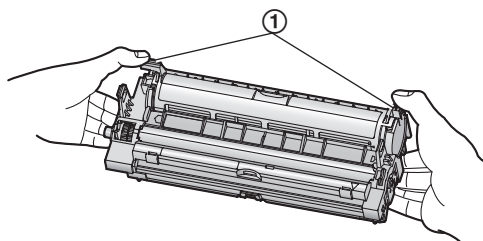


- 11** Make sure that the triangles (①) match, to install the toner cartridge correctly.

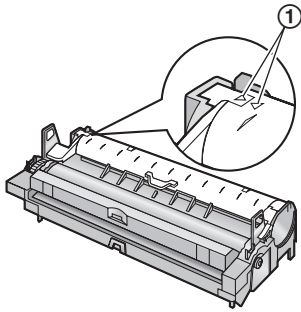


- If the lower glass (②) is dirty, clean it with a soft and dry cloth.

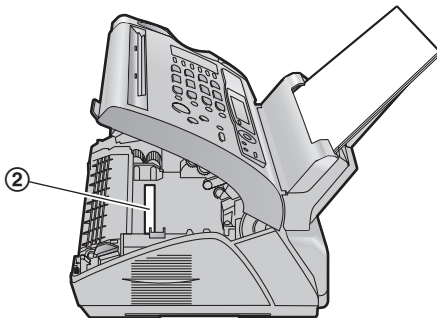


- 12** Install the drum and toner unit (①) by holding the tabs.

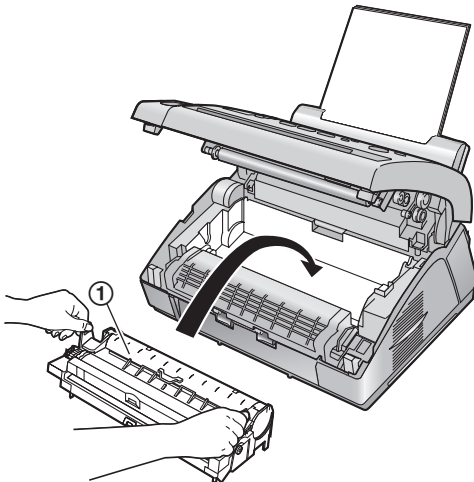

- Make sure that the triangles (②) match to install the drum and toner unit correctly.

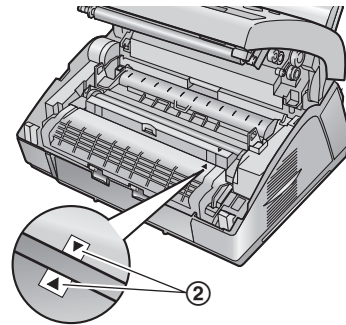

- 13** Close the front cover (①) by pushing down on both sides, until locked.

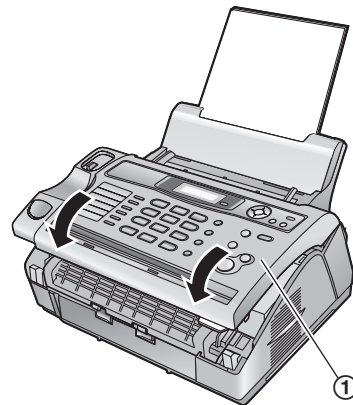

- 14** Place the handset on the cradle and attach the document stacker.

- While the unit displays “PLEASE WAIT”, do not open the front cover, or disconnect the power cord.

Waste disposal method

Waste material should be disposed of under conditions which meet all national and local environmental regulations.


8.5 Recording paper jam

The display will show the following.

PAPER JAMMED


8.5.1 When the recording paper has jammed near the drum and toner unit

- 1 Remove the handset and document stacker.
- 2 Lift open the front cover (①), holding the OPEN tab (②).

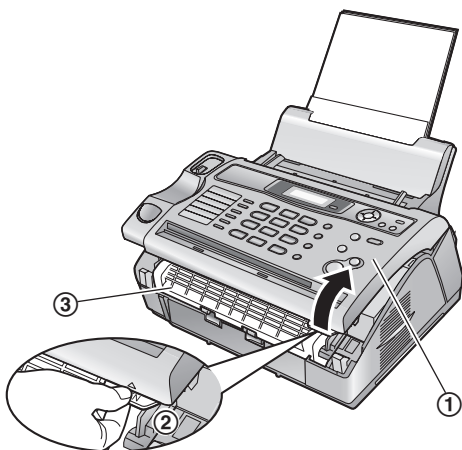


Caution:
The fuser unit (③) gets hot. Do not touch it.

- 3 Remove the jammed paper (①) carefully by pulling it toward you.

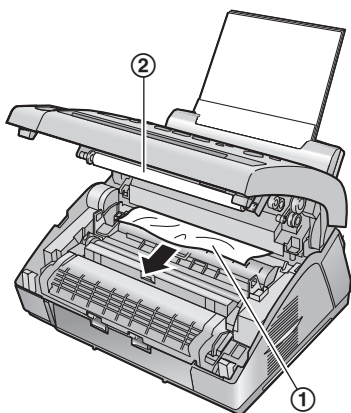

- Do not touch the transfer roller (②).


- 4 Close the front cover (①) by pushing down on both sides, until locked.

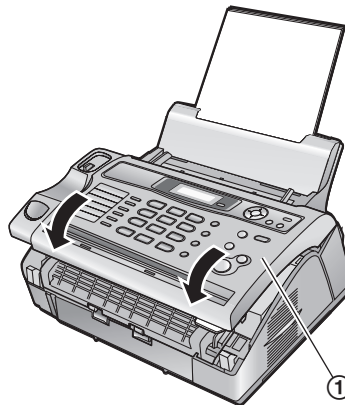

- 5 Place the handset on the cradle and attach the document stacker.


8.5.2 When the recording paper has jammed near the recording paper exit

- 1 Remove the handset and document stacker.
- 2 Lift open the front cover (①), holding the OPEN tab (②).

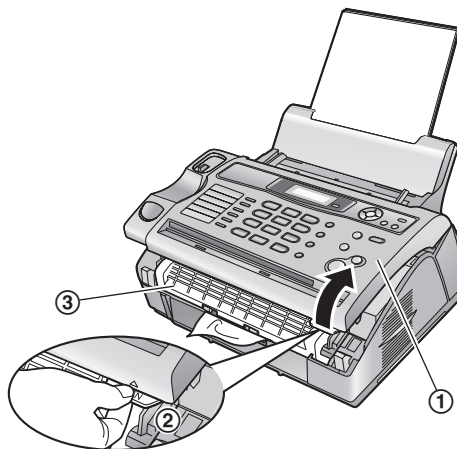


Caution:
The fuser unit (③) gets hot. Do not touch it.

- 3** Remove the recording paper (①), then remove the drum and toner unit (②) to allow the jammed paper (③) to pull free from the rear cabinet.

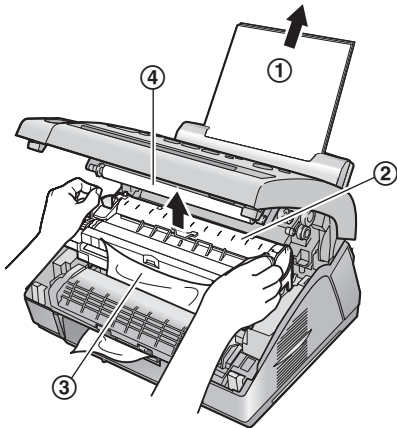


- Do not touch the transfer roller (④).


- 4** Lift both green levers (①) forward until they stop.

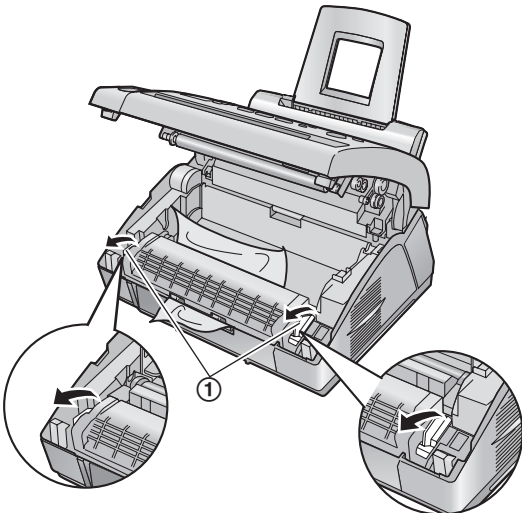


- 5** Remove the jammed paper (①) from the fuser unit by pulling it upwards carefully, then install the drum and toner unit.

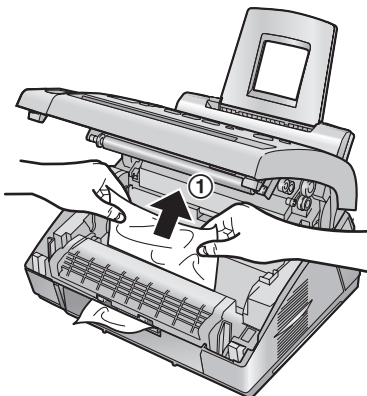

- 6** Push back the levers (①) to the original position.

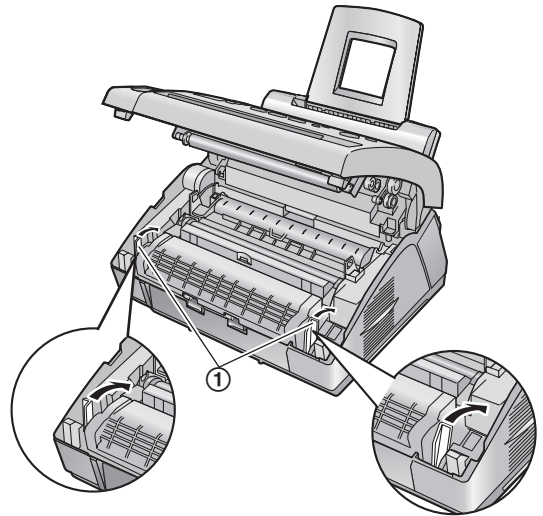


- 7** Close the front cover (①) by pushing down on both sides, until locked.

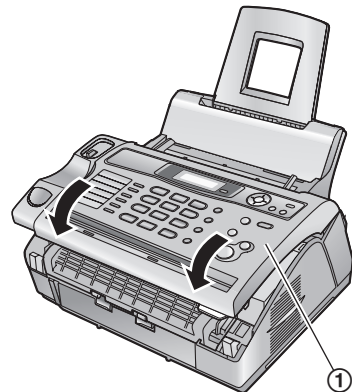

- 8** Place the handset on the cradle and attach the document stacker.

- 9** Pull the tension plate forward (①), then re-insert the recording paper.
- Before re-inserting, make sure to fan and straighten the recording paper.

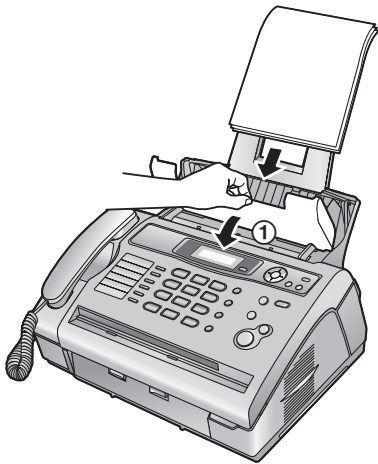


- 10** Push back the tension plate.

8.5.3 When the recording paper is not fed into the unit properly

The display will show the following.

FAILED PICK UP

- 1** Pull the tension plate forward (①), then remove the recording paper (②).

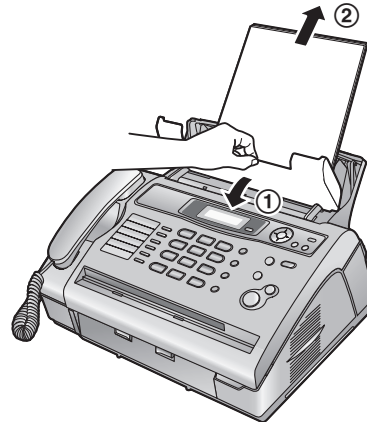


- 2** Re-insert the recording paper, then push back the tension plate (see steps 3 to 4 on page 14).
- Before re-inserting, make sure to fan and straighten the recording paper.


8.6 Document jams

Note:

- Do not pull out the jammed document forcibly before opening the front cover.

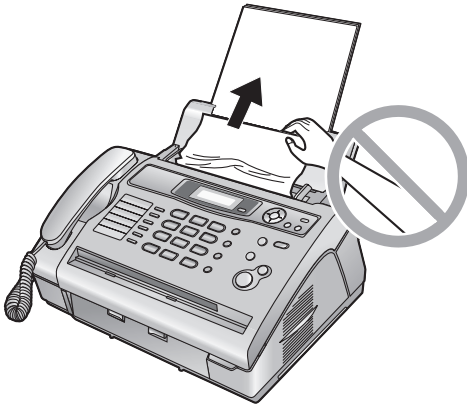


- 1 Remove the handset and document stacker.
- 2 Lift open the front cover (①), holding the OPEN tab (②).

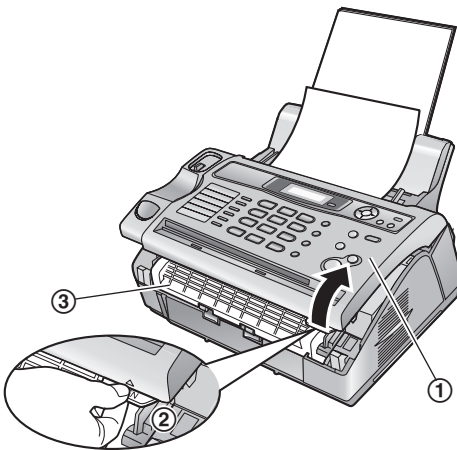


Caution:
The fuser unit (③) gets hot. Do not touch it.

- 3 Pull open the inner cover (①).

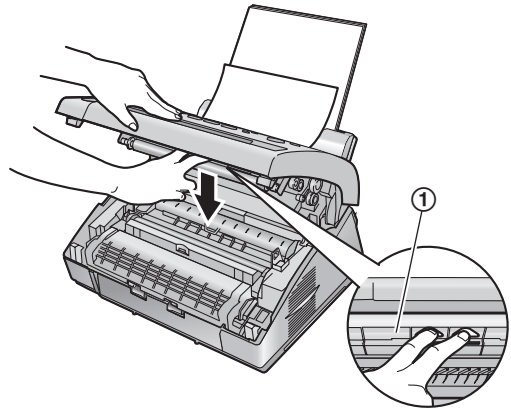


Note:

- Do not touch the transfer roller (②).

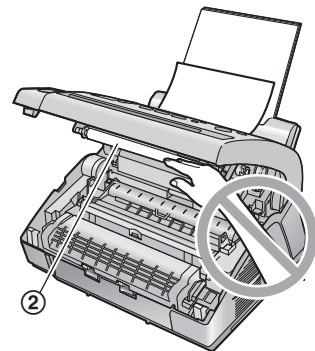


- 4 Remove the jammed document carefully (①).

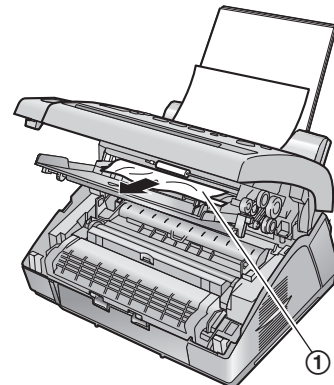

- 5 Push back the inner cover.

- 6 Close the front cover (①) by pushing down on both sides, until locked.

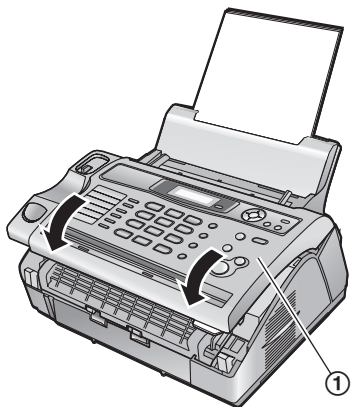

- 7 Place the handset on the cradle and attach the document stacker.

8.7 No feeding or multiple feeding occurs


If no feeding or multiple feeding occurs frequently, adjust the feeder pressure.

Shift the position of the green lever (①) using a stick-like-instrument with a pointed end.

Right: When documents do not feed.

Centre: Standard position (pre-selected)

Left: When documents multi-feed.

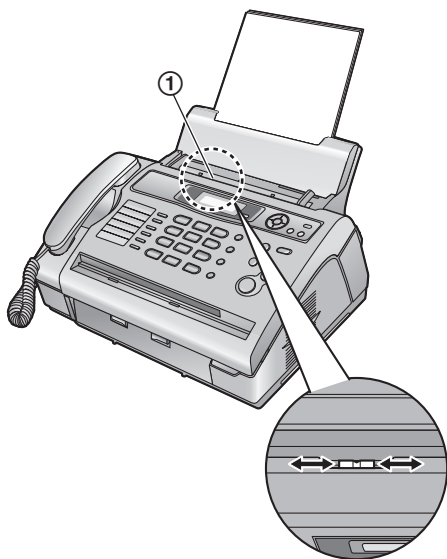

8.8 Cleaning the inside of the unit


Clean the inside of the unit:

- If misfeeding of your original occurs frequently.
- If a black line, a white line or a dirty pattern appears on your recording paper, on your original, or on the fax document received by the other party.

Caution:

- Be careful when handling the drum and toner unit. See the caution for the drum unit on page 53 for details.
- Do not use paper products, such as paper towels or tissues, to clean the inside of the unit.


- 1 Disconnect the power cord and the telephone line cord.
- 2 Remove the handset and document stacker.
- 3 Lift open the front cover (①), holding the OPEN tab (②).

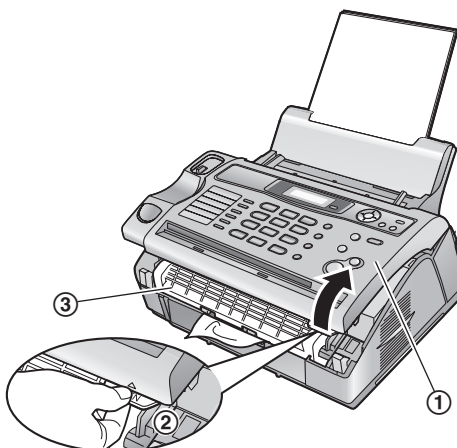


Caution:

The fuser unit (③) gets hot. Do not touch it.


- 4 Clean the document separation roller (①) with a cloth moistened with isopropyl rubbing alcohol, and let all parts dry thoroughly.

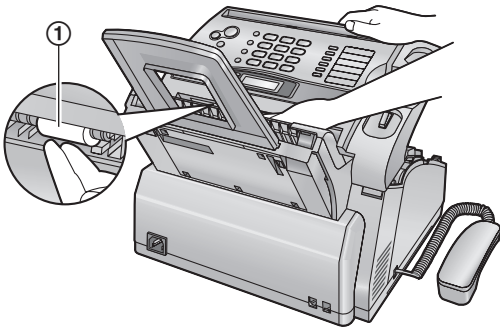


- 5 Pull open the inner cover (①).

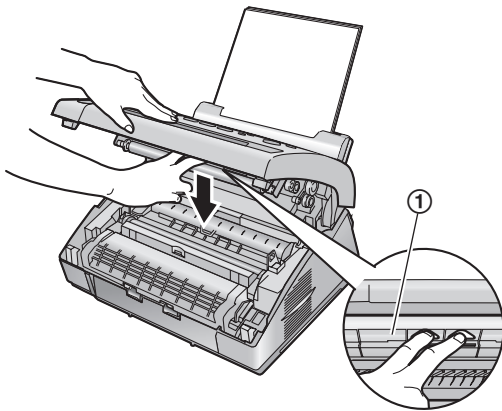

- Do not touch the transfer roller (②).

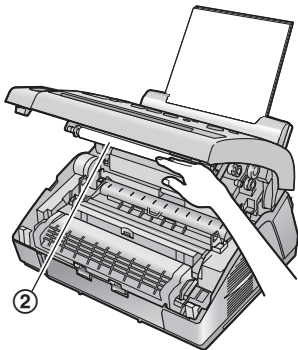


- 6 Clean the document feeder roller (①) with a cloth moistened with isopropyl rubbing alcohol, and let all parts dry thoroughly.
Clean the upper glass (②) with a soft and dry cloth.

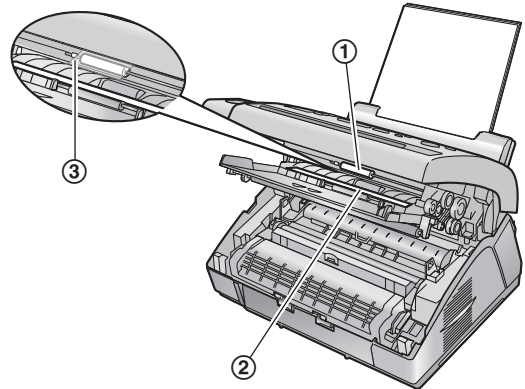


- Do not damage the transparent sheet (③) when cleaning the document feeder roller.

- 7 Push back the inner cover.


- 8 Remove the drum and toner unit (①) by holding the two tabs.

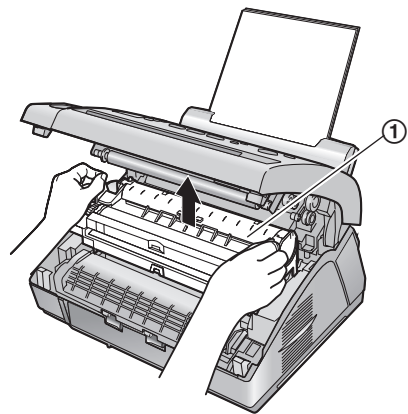


- 9 Clean the lower glass (①) with a soft and dry cloth.

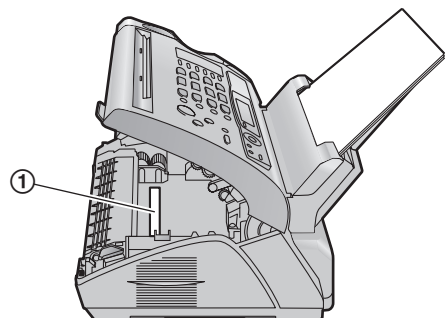

- 10** Re-install the drum and toner unit (①) by holding the tabs.

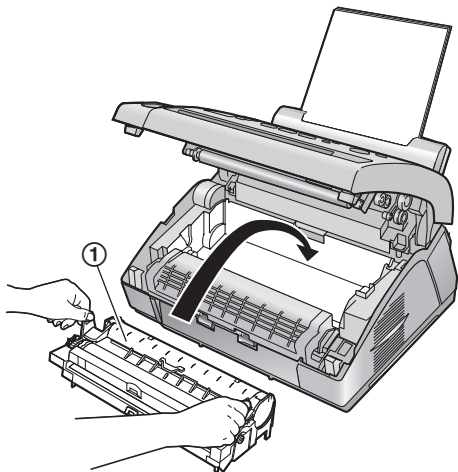

- Make sure that the triangles (②) match to install the drum and toner unit correctly.

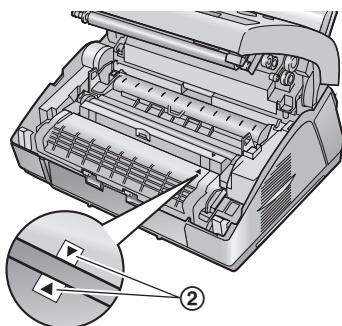

- 11** Close the front cover (①) by pushing down on both sides, until locked.




- 12** Place the handset on the cradle and attach the document stacker.
- 13** Re-connect the power cord and the telephone line cord.

9.1 Reference lists and reports

You can print out the following lists and reports for your reference.

- **“SETUP LIST”**:
Provides you with the current settings of the programming features (page 41 to page 45).
- **“TEL NO. LIST”**:
Provides you with names and numbers which are stored in the one-touch dial feature and phonebook.
- **“JOURNAL REPORT”**:
Keeps records of fax transmission and reception. This report can be printed automatically after every 30 fax communications (feature #22 on page 42).
- **“BROADCAST LIST”**:
Provides you with names and numbers which are stored in the broadcast memory (page 29).
- **“PRINTER TEST”**:
Allows you to check the print quality of your unit. If the test print has a dirty pattern, or blurred points or lines, clean the inside of the unit (page 60). If printing quality is still poor, replace the toner cartridge and drum unit.
- **“CALLER ID LIST”**:
Keeps records of the last 30 callers after subscribing to a Caller ID service. To print automatically after every 30 callers, activate feature #26 (page 42).

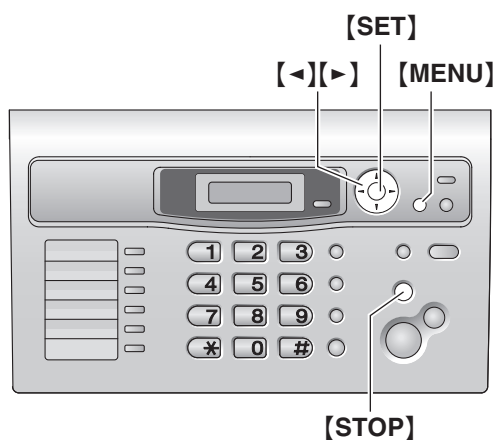

- 1 Press **[MENU]** repeatedly to display **“PRINT REPORT”**.
- 2 Press **[←]** or **[→]** repeatedly to display the desired item.
- 3 Press **[SET]** to start printing.
 - To stop printing, press **[STOP]**.
- 4 Press **[MENU]** to exit.

9.2 Specifications

Applicable lines:

Public Switched Telephone Network

Document size:

Max. 216 mm in width, Max. 600 mm in length

Effective scanning width:

208 mm

Effective printing width:

202 mm

Transmission time^{*1}:

Approx. 8 s/page (ECM-MMR)^{*2}

Scanning density:

Horizontal: 8 pels/mm

Vertical: 3.85 lines/mm-in standard resolution,
7.7 lines/mm-in fine/photo/mixed (photo with text)
resolution,

15.4 lines/mm-in super fine resolution

Photo resolution:

64-level

Scanner type:

Contact Image Sensor

Printer type:

Laser Printer

Data compression system:

Modified Huffman (MH), Modified READ (MR), Modified
Modified READ (MMR)

Modem speed:

14,400 / 12,000 / 9,600 / 7,200 / 4,800 / 2,400 bps;
Automatic Fallback

Operating environment:

10 °C – 32.5 °C, 20 % – 70 % RH (Relative Humidity)

Dimensions:

Approx. height 218 mm × width 360 mm × depth 357 mm

Mass (Weight):

Approx. 7.4 kg

Power consumption:

Standby: Approx. 3 W

Transmission: Approx. 12 W

Reception: Approx. 240 W

Copy: Approx. 240 W

Maximum: Approx. 950 W (When the fuser lamp turns
on)

Power supply:

220 – 240 V AC, 50/60 Hz

Fax memory capacity:

Approx. 150 pages of memory transmission

Approx. 40 pages of memory reception

(Based on the ITU-T No. 1 Test Chart in standard
resolution.)

Laser diode properties:

Laser output: Max. 5 mW

Wave length: 760 nm – 800 nm

Emission duration: Continuous


Print speed:

Approx. 10 ppm (pages per minute)

Printing resolution:

600 × 600 dpi

- *1 Transmission speed depends upon the contents of the pages, resolution, telephone line conditions and capability of the other party's machine.
- *2 Transmission speed is based upon the ITU-T No. 1 Test Chart. If the capability of the other party's machine is inferior to your unit, the transmission time may be longer.

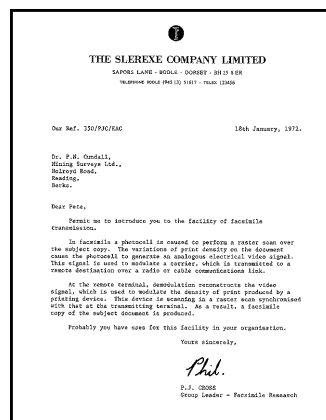ITU-T No.1 Test Chart**Note:**

- Design and specifications are subject to change without notice.
- The pictures and illustrations in these instructions may vary slightly from the actual product.

Drum life

The drum unit is a consumable item and needs to be replaced regularly. There are various factors that determine the actual drum life, such as temperature, humidity, type of paper and how much toner you use for the number of sheets per print job. The maximum drum life is approx. 10,000 sheets at 20 sheets per print job. The actual number of sheets your drum will print may be significantly less than this estimate if your unit is often used for printing small number sheets per job. Because many of the factors that determine the actual drum life cannot be controlled, we cannot guarantee a minimum number of sheets that will be printed by your drum.

10.1 Index

- # #01 Date and time: 17
- #02 Your logo: 18
- #03 Your fax number: 20
- #04 Sending report: 28, 41
- #06 FAX ring count: 41
- #13 Dialling mode: 16
- #17 Ringer type: 41
- #22 Automatic journal report: 28, 42
- #23 Overseas mode: 42
- #25 Delayed send: 42
- #26 Automatic caller information list: 42
- #30 Silent fax ring count: 43
- #31 Distinctive Ring: 37
- #37 Auto reduction: 43
- #39 LCD display contrast: 43
- #41 Fax activation code: 43
- #44 Memory reception alert: 43
- #46 Friendly reception: 43
- #49 Auto disconnection: 44
- #58 Scan contrast: 44
- #68 ECM selection: 44
- #72 Flash time: 44
- #73 Manual answer mode: 44
- #76 Connecting tone: 45
- #78 TEL/FAX ring setting: 45
- #79 Toner save: 45
- #80 Set default: 45
- A** Accessories
 - Document stacker: 13
 - Paper stacker: 12
 - Paper tray: 12
 - Advanced features: 42
 - Alert
 - Memory reception (Feature #44): 43
 - Answering machine: 35
 - Auto disconnection (Feature #49): 44
 - Auto reduction (Feature #37): 43
- B** Basic features: 41
 - Broadcast transmission: 29
- C** Caller ID
 - Calling back: 24
 - Storing: 25
 - Caller information list (Feature #26): 42
 - Character table: 18
 - Cleaning: 60
 - Connecting tone (Feature #76): 45
 - Connections: 15
 - Copy: 38
 - Collation: 39
 - Enlarge: 38
 - Reduce: 38
- D** Date and time (Feature #01): 17
 - Delayed transmission (Feature #25): 42
 - Dialling mode (Feature #13): 16
 - Display
 - Contrast (Feature #39): 43
 - Error messages: 47
 - Document size: 28
 - Drum life: 66
 - Drum unit
 - Installing: 10
 - Replacing: 53
 - Duplex ring service (Feature #31): 37
- E** ECM selection (Feature #68): 44
 - Error messages: 46, 47
 - Extension telephone: 34
- F** Fax activation code (Feature #41): 43
 - Fax number (Feature #03): 20
 - FAX ONLY mode: 33
 - Feeder pressure: 60
 - Flash time (Feature #72): 44
 - Friendly reception (Feature #46): 43
- H** Help: 16
- J** Jams
 - Document: 59
 - Recording paper: 56
 - Journal report (Feature #22): 28, 42
 - Junk fax prohibitor: 36
- L** Logo (Feature #02): 18
- M** Manual answer mode (Feature #73): 44
 - Memory reception alert (Feature #44): 43
- O** One-touch dial
 - Making a phone call: 22
 - Sending faxes: 29
 - Storing: 22
 - Overseas mode (Feature #23): 42
- P** Phonebook
 - Making a phone call: 21
 - Sending faxes: 29
 - Storing: 21
 - Polling: 35
 - Power failure: 52
 - Programming: 40
- Q** Quick scan: 27
- R** Receiving faxes
 - Automatically: 33
 - Manually: 33
 - Recording paper: 14
 - Recording paper size: 65
 - Redialling: 27, 29
 - Reports
 - Broadcast programming: 63
 - Broadcast sending: 30
 - Caller information: 42
 - Journal: 28, 63
 - Power down: 52
 - Printer test: 63
 - Sending: 28, 41
 - Setup: 63
 - Telephone number: 63

Reset (Feature #80): 45
Resolution: 27, 38
Ringer type (Feature #17): 17, 41
Ring setting
 FAX ONLY (Feature #06): 41
 Silent fax (Feature #30): 43
 TEL/FAX (Feature #78): 45

- S** Scan contrast (Feature #58): 44
Sending faxes
 Broadcast: 30
 From memory: 27
 Manually: 27
 One-touch dial: 29
 Phonebook: 29
Sending report (Feature #04): 28, 41
Set default (Feature #80): 45
Storing
 Broadcast: 29
 One-touch dial: 22
 Phonebook: 21
- T** TEL/FAX mode: 34
TEL mode: 33
Toner cartridge
 Installing: 10
 Replacing: 53
Toner life: 65
Toner save (Feature #79): 11, 45
- V** Volume: 17

Notes

Notes

Sole agent:

Shun Hing Technology Co., Ltd.

9th Floor, Peninsula Centre 67, Mody Road, Tsimshatsui East, Kowloon, Hong Kong

Web site: <http://www.panasonic.oa.com.hk>

Manufacturer:

Panasonic Communications (Malaysia) Sdn. Bhd.

PLO No.1, Kawasan Perindustrian Senai, KB No. 104, 81400 Senai, Negeri Johor Darul Ta'zim, Malaysia

Global web site:

<http://panasonic.net>



FL313HK